

TM 55-1520-228-MTF

**MAINTENANCE TEST
FLIGHT MANUAL**

**ARMY MODEL
OH-58A/C HELICOPTER**

Approved for public release; distribution is unlimited.

This manual supersedes TM 55-1520-228-MTF
1 March 1982 and TM 55-1520-235-MTF
1 March 1982, including all changes.

**HEADQUARTERS
DEPARTMENT OF THE ARMY**

1 NOVEMBER 1988

URGENT

TM 55-1520-228-MTF
C2

CHANGE }
NO. 2 }

HEADQUARTERS
DEPARTMENT OF THE ARMY
WASHINGTON, D.C., 31 July 1991

MAINTENANCE TEST
FLIGHT MANUAL

ARMY MODEL
OH-58A/C HELICOPTER

TM 55-1520-228-MTF, 1 November 1988,
is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
1-3/1-4	1-3 and 1-4
2-3 through 2-6	2-3 through 2-6
2-8.1/2-8.2	2-8.1/2-8.2
2-9 through 2-12	2-9 through 2-12
2-15 through 2-28	2-15 through 2-28
2-31 through 2-42	2-31 through 2-42
2-43 through 2-46	2-43 through 2-46
3-3 and 3-4	3-3 and 3-4
3-9 and 3-10	3-9 and 3-10
3-13 through 3-16	3-13 through 3-16
3-27 and 3-28	3-27 and 3-28

URGENT

TM 55-1520-228-MTF
C 2

Remove pages	Insert pages
3-33 through 3-36	3-33 through 3 - 3 6
3-41 and 3-42	3-41 and 3-42
3-55 and 3-56	3-55 and 3-56
4-7 through 4-10	4-7 through 4-10
4-17 and 4-18 - - - -	4-17 and 4-18 4-18.1/4-18.2
5-1 and 5-2	5-1 and 5-2
5-7 through 5-12	5-7 through 5-12

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

GORDON R. SULLIVAN
General, United States Army
Chief of Staff

Official:

PATRICIA P. HICKERSON
Colonel, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31-E, block no. 0231, MTF maintenance requirements for TM 55-1520-228-MTF.

CHANGE }
 NO. 1 } HEADQUARTERS
 DEPARTMENT OF THE ARMY
 WASHINGTON, D.C., 1 February 1990

MAINTENANCE TEST
 FLIGHT MANUAL

ARMY MODEL
 OH-58A/C HELICOPTER

TM 55-1520-228-MTF, 1 November 1988,
 is changed as follows:

1. Remove and insert pages as indicated below. New or changed text material is indicated by a vertical bar in the margin. An illustration change is indicated by a miniature pointing hand.

Remove pages	Insert pages
iii/iv	iii/iv
1-3/1-4	1-3/1-4
2-1 and 2-2	2-1 and 2-2
-----	2-2.1/2-2.2
2-7 and 2-8	2-7 and 2-8
-----	2-8.1/2-8.2
2-9 and 2-10	2-9 and 2-10
-----	2-42.1/2-42.2
2-43 and 2-44	2-43 and 2-44
-----	3-63 through 3-66
-----	4-19 and 4-20
5-13 and 5-14	5-13 and 5-14

2. Retain this sheet in front of manual for reference purposes.

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION:

To be distributed in accordance with DA Form 12-31, MTF Maintenance requirements for OH-58A & C Helicopter, Observation.

WARNING

A maintenance test flight is an exceptionally demanding operation and requires a thorough flight readiness inspection (PREFLIGHT). The flight readiness inspection is prescribed in TM 55-1520-228-1 Operator's Manual and must be completed prior to each maintenance test flight. Emergency procedures are found in the applicable -10 or checklist (CL) and are not duplicated in this publication. Prior to each maintenance test flight, the pilot will contact maintenance/quality control personnel to determine the maintenance that has been performed. This manual should be used only by qualified maintenance test flight pilots as required in AR 95-1.

TM 55-1520-228-MTF

TABLE OF CONTENTS REPORTING ERRORS AND RECOMMENDING IMPROVEMENTS

You can help improve this manual. If you find any mistakes or if you know of a way to improve the procedures, please let us know. Mail your letter, DA Form 2028 (Recommended Changes to Publications and Blank Forms), or DA Form 2028-2 located in the back of the applicable Aircraft Operator's Manual (when using the 2028-2 from Operator's manual ensure the publication number and title reflect this MTF) direct to Commander, ATTN: AMSAV-MMD, 4300 Goodfellow Blvd., St. Louis, MO 63120-1798. A reply will be furnished to you.

Section	Page
I Introduction1-1
II Maintenance Test Flight Checklist2-1
Prior to Maintenance Test Flight.2-1
Before Starting Engine Checks2-2
Starting Engine Checks2-10
Engine Runup Checks2-13
Before Takeoff Checks2-26
Aircraft Hover Checks2-27
Inflight Checks2-32
Before Landing Checks2-44
After Landing Checks2-44
Engine Shutdown Checks2-44

TM 55-1520-228-MTF

Section	Page
III Troubleshooting Guide.3-1
Troubleshooting Guide A -	
Starting3-1
Troubleshooting Guide B -	
Instruments3-7
Troubleshooting Guide C -	
Electrical3-17
Troubleshooting Guide D -	
Caution Panel3-26
Troubleshooting Guide E -	
Power Plant3-32
Troubleshooting Guide F -	
Transmission3-43
Troubleshooting Guide G -	
Hydraulic3-46
Troubleshooting Guide H -	
Flight Controls3-50
Troubleshooting Guide I -	
Not Applicable3-56
Troubleshooting Guide J -	
Vibrations3-56
Troubleshooting Guide K -	
Communication/Navigation	
Equipment3-61
Troubleshooting Guide L -	
Air-To-Air Stinger (ATAS)	
Missile System3-63
IV Special Procedures4-1
Altimeter, Radar, AN/APN-209,	
Self - Test4-1
Radar Warning Receiver, AN/APR-39,	
Self - Test4-2
Vibration Analysis4-3
Track and Balance Procedures4-6
Fuel Control Max Speed Stop4-18
Baseline Hit4-18
ATAS Missile System Check.4-19
V Charts and Forms5-1
List of Charts5-1

SECTION I. INTRODUCTION

1. Purpose. The purpose of this manual is to provide complete instructions for performing a maintenance test flight of OH-58A/C helicopters. For the specific conditions which require a general or limited maintenance test flight, refer to TM 55-1500-328-25, TM 55-1520-228-23-1/2, and TM 11-1520-228-23.

2. Definition.

a. Maintenance Test Flight. A functional test flight for which the primary purpose is to determine whether the airframe, power plant, accessories, and other equipment are functioning in accordance with pre-determined requirements while subjected to the intended environment.

b. Warnings, Cautions, and Notes. Warnings, Cautions, and Notes are used to emphasize important and critical instructions and are used for the following conditions:

WARNING

An operating procedure, practice, etc., which, if not correctly followed, could result in personnel injury or loss of life.

CAUTION

An operating procedure, practice, etc., which, if not strictly observed, could result in damage to or destruction of equipment.

NOTE

An operating procedure, practice, etc., which is essential to highlight.

3. General Information.

a. This manual covers only maintenance test flight of OH-58A/C helicopters and in no way supersedes any information contained in TM 55-1520-228-10 or -CL, but is to be used in conjunction with the -10 and -CL. For the purpose of maintenance test flights only, this manual satisfies all the requirements of the -CL from "Before Starting Engine Checks" through "Engine Shutdown Checks. "

b. Crew requirements will be as specified in TM 55-1500-328-25 and TM 55-1520-228-10.

c. The duration of the general or limited test flight will be in accordance with the requirements of TM 55-1500-328-25.

4. Special Instructions.

a. Cargo and Passengers. Cargo and passengers are prohibited on maintenance test flights.

b. Forms and Records. Forms and records will be checked prior to the maintenance test flight to determine maintenance performed and type of test flight required (i.e., general or limited).

c. Configuration. The configuration of the helicopter should be determined prior to the maintenance test flight in order to determine performance parameters.

d. Post Test Flight Inspection. A thorough visual inspection will be performed to the extent necessary to

assure that deficiencies or shortcomings that may have developed as a result of the maintenance test flight are detected.

e. Reference. When a maintenance test flight is required to assure proper operation of a specific system(s), refer to the applicable maintenance manual for the limits of that system.

f. Asterisked Checks. An asterisk (*) prior to a check requires that the Test Flight Check sheet be annotated.

g. Maintenance Test Flight Check Sheet. The sample check sheet contained in Section V will be used on all Maintenance Test Flights. When a test flight is performed for the purpose of determining if specific equipment or systems are operating properly, completion of only that portion of the Maintenance Test Flight (MTF) Check Sheet applicable to the specific equipment or systems being tested is needed. The helicopter test flight Check Sheets may be locally reproduced. Continuation sheets may be used when necessary. Items that prove to be unsatisfactory during the test flight, and require corrective action, shall be listed in the remarks block during flight and transferred to DA Form 2408-13 immediately after termination of the flight. The sheet will be attached to DA Form 2408-13 upon completion. After accumulation of two or more sheets, the data should be reviewed to determine if trends are developing.

h. Series and Effectivity Codes. Procedural requirements peculiar to individual series and configurations are indicated by the following codes:

A -- OH-58A with T63-A-700 engine

A-720 -- OH-58A with T63-A-720 engine

C -- OH-58C

CS -- Air-To-Air Stinger (ATAS) missile system installed on OH-58C.

SECTION II. MAINTENANCE TEST FLIGHT CHECKLIST

General. This section contains the maintenance test flight requirements peculiar to Army model OH-58A/C helicopters. Conditions requiring accomplishment of test flights shall be in accordance with TM 55-1500-328-25. The requirements contained herein are established to assure a thorough inspection of the helicopter before flight, during flight, and upon completion of the maintenance test flight. The right side of the checklist (Troubleshooting Reference) is cross-indexed to the troubleshooting guides contained in Section III. A dash between references means "through;" a comma means "and." The references list the possible abnormal conditions, indications, or malfunctions which could be encountered while performing the procedure.

PROCEDURE	TROUBLESHOOTING REFERENCE
PRIOR TO MAINTENANCE TEST FLIGHT	

- *1. Forms and Records - Check.
- *2. A thorough flight readiness inspection will be performed in accordance with the requirements contained in TM 55-1520-228-10 - Performed.
3. Special preflight checks - Complete as applicable.
 - a. Armament system - Check and safe.

PROCEDURE

TROUBLESHOOTING
REFERENCE

PRIOR TO MAINTENANCE TEST FLIGHT (CONT)

- CS** b. Captive flight trainer missile -
Installed.

BEFORE STARTING ENGINE CHECKS

- | | | |
|----|--|--------------|
| 1. | Pedals - Adjust as required. | |
| 2. | Seat belts and shoulder harness -
Fasten and adjust. | |
| 3. | Shoulder harness, inertia reel, and
lock - Check operation and leave
unlocked. | |
| 4. | Cyclic control - Friction off, check
freedom of movement through full
range of travel (note main rotor
pitch change). | H1, 12
15 |
| 5. | Collective Control - Friction off,
check freedom of movement through
full range of travel (note main rotor
pitch change and coupling effect). | H6, 7 |
| 6. | Pedals - Check pedals through full
range of travel, and no binding. | H3, 4 |
| 7. | Throttle - Full Open, close to idle
stop, check for positive stops. Check
idle release, close throttle. | E1, 37 |

PROCEDURE

TROUBLESHOOTING
REFERENCE

BEFORE STARTING ENGINE CHECKS (CONT)

8. Avionics - Off. Set as required.
- 8.1. **CS** PDU vertical height adjust knob - As required.
- 8.2. **CS** ATAS control panel - Set as follows:
 - a. MASTER switch - STBY. Verify symbology appears within 20 seconds.
 - b. UNCAGE switch - AUTO.
9. System Instruments - Check static indications and range marking in accordance with TM 55-1520-228-10.

L1

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

BEFORE STARTING ENGINE CHECKS (CONT)

NOTE

Any round instrument which has a range marking on glass face must also have a white slippage mark from the glass to frame.

A & A-720 MODELS

C MODEL

- | | |
|--------------------------------------|-----------------------------|
| a. ENG OIL PRESSure. | a. Gas producer tachometer. |
| b. ENG OIL Temperature. | b. TOT gauge. |
| c. TORQUE meter. | c. ENG OIL Temperature. |
| d. TURBine OUTlet Temperature gauge. | d. ENG OIL Pressure. |
| e. GAS PRODUCER tachometer. | e. XMSN OIL pressure. |
| f. Dual Tachometer | f. AMPS meter. |
| (1) TURBine. | |
| (2) ROTOR. | |
| | g. FUEL QTY. |
| | h. TORQUE meter. |

PROCEDURE

TROUBLESHOOTING
REFERENCE

BEFORE STARTING ENGINE CHECKS (CONT)

A & A-720 MODELS

C MODEL

i. Dual Tachometer

(1) ENGINE.

(2) ROTOR.

10. Clock -- Wound and running. B18

11. Flight Instruments -- Check static indications and range markings in accordance with TM 55-1520-228-10.

NOTE

Any round instrument which has a range marking on glass face must also have a white slippage mark from the glass to frame.

a. AIRSPEED indicator. B16

C b. Attitude indicator -- Warning flag visible. B17
Rate of turn pointer out of view. Ball centered, full-of fluid.

A b. Attitude indicator -- OFF flag visible. B17
A-720

c. RBI -- Off flag visible, deviation card calibrated within the last 12 months.

PROCEDURE

TROUBLESHOOTING
REFERENCE

BEFORE STARTING ENGINE CHECKS (CONT)

- C** d. Omni bearing selector -- OFF flag visible, needles centered.
- C** e. Radar Altimeter -- OFF, and set.
 - *f. Altimeter -- Set field elevation, except AIMES. B15
 - g. IVSI -- Check indication. B16
 - A** h. Turn and Slip indicator- -- Needle ball centered, full of fluid. B17
 - A-720**
 - i. Magnetic compass -- Check fluid level discoloration, approximate correct heading, deviation card calibrated with the last 12 months. B19

12. Mist Control Panels and Switches.

A & **A-720** MODELS

C MODEL

- | | |
|-------------------------------------|--|
| a. DIR GYRO switch -- MAG. | a. IFF CODE switch OFF. |
| b. IFF CODE switch -- OFF. | b. RMI BRG PNTR switch -- As required. |
| c. FORCE TRIM switch -- FORCE TRIM. | c. DIR GYRO switch -- MAG. |

PROCEDURE

TROUBLESHOOTING
REFERENCE

BEFORE STARTING ENGINE CHECKS (CONT)

A & A-720 MODELS

C MODEL

d. HYD BOOST
switch -- HYD
BOOST.

d. FORCE TRIM
switch -- FORCE
TRIM.

e. FUEL BOOST.
switch -- OFF.

e. HYD BOOST
switch -- HYD
BOOST.

f. FUEL BOOST
switch -- OFF.

13. Cockpit Utility Light(s) -- OFF.

14. HEATer Rheostat -- Check smooth E32
operation and contact of both stops.
Turn off (counterclockwise).

15. Overhead Circuit Breakers and Switches:

a. Circuit breakers -- All in.

b. CONSOLE LTS and INST LTS
rheostats -- As required.

c. ANTI-COLLISION LTS switch -- C27, 28
ANTI-COLLISION LTS.

d. POS LTS switch -- As required. C19, 20

e. NVG LTS switch -- As required.

PROCEDURE

TROUBLESHOOTING REFERENCE

BEFORE STARTING ENGINE CHECKS (CONT)

- C**f. CSL LT switch - As required. C15
 - g. AUTO ENG OIL switch - OFF.
 - h. HTR switch - OFF.
 - i. DEFOG & VENT switch - OFF.
 - j. PITOT HTR switch - OFF.
 - k. ENG DEICE switch - OFF.
 - i. INV switch - OFF.
 - m. NON-ESS BUS switch - As required.
 - n. GEN switch - OFF.
 - o. BAT switch - OFF.
 - p. AUX RECP switch - OFF.
16. Fuel Valve Handle - Check for smooth operation and positive on/off position, threads in witness hole, cotter keys present, cracks, and excessive grooves on lever arm. Leave in forward (on) position and lock into detent.

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

BEFORE STARTING ENGINE CHECKS (CONT)

- *17. FAT Gage - Check reading and condition. B27
18. BAT switch - BAT (OFF for GPU start); Ground Power Unit Connected for GPU start. C1-5, 25, 26
19. Light System Checks:
- a. Cockpit light - Check condition and smoothness of operation of rheostat. Check both red and white positions operational. Leave in red and off.
 - b. Interior lights - Check operation of console and instrument light. C15
 - c. NVG lights - Check operation.
- *20. Warning Lights:
- a. ROTOR RPM light - On. B1, 2, 25, 28, D15
 - b. ENGINE OUT light - On. B1, 2, 25, D15
 - c. XMSN OIL PRESS light - On. B25, D15, F2
 - d. XMSN OIL HOT light - Off. B25, D15, F3

PROCEDURE

TROUBLESHOOTING
REFERENCE

BEFORE STARTING ENGINE CHECKS (CONT)

- e. Warning lights -- Press-to-test. B25, D15
XMSN OIL HOT light -- On when B25, D15
switch is depressed.

- * 21. CAUTION Panel -- Check, MASTER C17, 18
CAUTION light-- A-720 Flashing C D1-10
On. Hold test / reset switch to test and 15-16
check all caution lights on. Check dim 18
capability with INST LTS rheostat offset F9
from DIM position. Reset caution lights.
All caution lights should be off except
INST INVERTER, DC GENERATOR,
and HYD PRESS.

- 22. Misc Caution Lights:
 - a. IFF CODE MODE light -- On when D1
pressed.

 - C b. PRI DIR CONTR -- JAM and DISENG D1
lights -- On when depressed (if in-
stalled).

 - c. ENGINE RELIGHT -- On when pressed
(if installed).

- 23. Mist Instruments:
 - a. A A-720 ENG OIL TEMP and TOT B22, 24
GAGES, C ENG OIL TEMP -- Check
against FAT gage for approximately
correct indication.

PROCEDURE

TROUBLESHOOTING
REFERENCE

BEFORE STARTING ENGINE CHECKS (CONT)

- b. FUEL QTY--Check. B3-6, 27
- c. AIMES altimeter -- Set (if installed) B14
- 23.1. **CS** PDU Check:
 - a. PDU BRT knob -- As desired. L3
 - b. PDU TEST switch -- Press. Verify mis- L2
sile status and target acquisition sym-
bology disappears, TEST displays for 5
seconds then disappears, PASS dis-
plays for 5 seconds, missile status and
target acquisition symbology reap-
pears. Ensure no component displays
FAIL.
- 23.2. **CS** ATAS MASTER switch -- OFF.

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

BEFORE STARTING ENGINE CHECKS (CONT)

- | | |
|--|-------------|
| 24. Engine Out/Low Rotor Audio -
Check by raising collective. Audio
should be heard when collective is
raised approximately one inch. | B1, 2
K2 |
| 25. GOV RPM switch - DECR for seven
seconds. | E7, 8 |
| 26. Throttle - Check closed | |
| 27. Starter/ignition lock switch - On. | |

STARTING ENGINE CHECKS

1. Fireguard - Posted.
2. Rotor Blades - Check clear and
untied.

CAUTION

Refer to TM 55-1520-228-10 for engine starting limits. Abort start if abnormal conditions are noted.

CAUTION

In the event of a GPU failure during starting, the starter will cease to function and a hot start could occur. Immediately close the throttle, place the BAT switch to BAT and complete abort start procedures. Note peak TOT and record on DA Form 2408-13, if TOT limits are exceeded.

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

STARTING ENGINE CHECKS (CONT)

3. Engine Start:

- | a. | FUEL BOOST switch - FUEL BOOST, note momentary illumination of FUEL BOOST caution light, then out. | C29, 31
E2 | | | | | | | | |
|-------------------|---|------------------------|---------|---------------|-----|-------------------|------|-----------------|-----|--|
| b. | TOT - Check below 200 degrees C. | B21-24 | | | | | | | | |
| c. | STARTER switch - Press and hold. Start time. | A1-11
C1, 2 | | | | | | | | |
| d. | THROTTLE - Open to engine idle at peak of N1 RPM, provided the following limits are maintained: | E1-6
E15, 16
E28 | | | | | | | | |
| | <table border="0"><thead><tr><th>FAT</th><th>MINIMUM</th></tr></thead><tbody><tr><td>7°C and above</td><td>15%</td></tr><tr><td>7°C through -18°C</td><td>13%.</td></tr><tr><td>-18°C and below</td><td>12%</td></tr></tbody></table> | FAT | MINIMUM | 7°C and above | 15% | 7°C through -18°C | 13%. | -18°C and below | 12% | |
| FAT | MINIMUM | | | | | | | | | |
| 7°C and above | 15% | | | | | | | | | |
| 7°C through -18°C | 13%. | | | | | | | | | |
| -18°C and below | 12% | | | | | | | | | |
| e. | ENG OIL PRESS - Check for increase by 20% N1 RPM or abort start. | B29-34 | | | | | | | | |
| f. | Main Rotor - Check turning by 30% N1 RPM or abort start. | A9, 10 | | | | | | | | |
| | T O T - Monitor for overtemperature conditions and record peak indication, ensure TOT stabilizes. | B21-24 | | | | | | | | |

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

STARTING ENGINE CHECKS (CONT)

- h. ENGINE OUT light -- Check out at 55+/- B12
3% N1 RPM.
 - *i. STARTER switch -- Release at 58-62% A5, 9, 11
N1 RPM and record duration of start
time.
 - j. ENG OIL PRESS -- Check indication. B29-32
 - C** k. XMSN OIL indicator -- Check indica-
tion.
 - i. XMSN OIL PRESS light -- Check out. B35, F1
 - m. TORQUEmeter -- Check indication by B7-10
62% N1 RPM.
 - n. GAS PRODUCER tachometer -- Ap- E3, 4, 5
proximately 62- 64% N1 RPM. E22
 - A** 0. Dual Tachometer -- Check stabilized B12, 13
A-720 within one needle width. **C** Needles
joined.
 - p. CAUTION lights -- All out except DC D1-5
GEN and INST INV. 17, 18
4. GPU -- Disconnect (if used).

CAUTION

Check GPU disconnected prior to turning the BAT
switch to BAT.

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

STARTING ENGINE CHECKS (CONT)

- | | |
|--|-------------------------------|
| 5. BATtery switch - BAT (GPU start). | C6 |
| 6. GEN switch - GEN, check CAUTION panel lights out, check AMPS (meter), N1, and TOT. Monitor AMPS (meter) for gradual decrease in amps. | C6-11
C17
D3, 12
D16 |
| 7. CAUTION panel and MASTER CAUTION lights - Out, except for INST INV. | D1-18
F1,3 |
| 8. Check for leaks. | E24-27
E30, 36
F5-8 |
| 9. Circuit breakers - All in. | C16 |
| 10. ENG OIL TEMP - Check for indication and rising. | B33, 34 |

ENGINE RUNUP CHECKS

- *1. Cyclic Check:

CAUTION

Limit cyclic to two inches maximum displacement from center.

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

ENGINE RUNUP CHECKS (CONT)

- | | |
|---|-------------------------|
| a. FORCE TRIM switch - FORCE TRIM, check for positive feeling of force gradient springs. No loose play allowed, check for approximately equal forces needed to offset cyclic into lateral and fore and aft positions. Check operation of both cyclic force trim interrupter switches. Note both cyclic sticks, equally aligned. | G3, 4
H8-15 |
| b. FORCE TRIM switch - Off, Check for creep and motoring. Check for freedom of movement. No binding or restriction allowed. | G3, 4
H1,2
H11-13 |
| c. Use spring scale to check all quadrants for equal force of one pound +/- 0.5 pound. FORCE TRIM ON after check. | G7
H1,2
H12 |
| d. Cyclic Friction Check. Cyclic friction full on - Force Trim - OFF. Ensure cyclic can be moved without excessive force. Check that both cyclic sticks are equally aligned. Force Trim - ON - Friction off. | H1, 2, 12 |

PROCEDURE

TROUBLESHOOTING
REFERENCE

ENGINE RUNUP CHECKS (CONT)

*2. Collective Check:

- | | | |
|----|---|-----------------------|
| a. | Raise collective a maximum of 1/2 inch. Use spring scale to check built-in friction of 4 to 6 pounds. Collective down. | G3, 4
9, H6 |
| b. | Raise collective to mid-travel while checking for binding and hard spots. Observe control reaction and that HYD BOOST light remains out. Collective down. | G3, 4
9
H7, D13 |
| c. | Collective friction on. An acceptable increased force should be required to move the collective. Collective down, friction off. | H5, 6
H7 |

*3 Hydraulic System Check:

CAUTION

Before any movement of controls with the hydraulic system off, both hands must be on the controls.

CAUTION

If a copilot/observer is used, brief not to remove his hand from hydraulic control switch unless instructed to do so. Be prepared for possible up forces on collective. If up forces are excessive, return switch to on. This condition must be corrected before continuing.

PROCEDURE

TROUBLESHOOTING
REFERENCE

ENGINE RUNUP CHECKS (CONT)

CAUTION

Limit cyclic movement to two-inch maximum displacement.

- a. FORCE TRIM OFF, HYD BOOST G2, 5 switch OFF, RESET caution panel. Check for unusual forces or feedback while moving cyclic.

NOTE

Feedback forces will be encountered when moving the cyclic stick. If hydraulic servos are functioning properly, negligible forces will be required to maintain a given stick position once the stick is stopped.

- b. Check that collective can be moved up to about mid-travel and moved full down. G5, 10 H7
- c. Pull HYD BOOST SOL circuit breaker to check fail safe system. Check hydraulic POWER RESTORED and HYD PRESS caution light out. HYD BOOST switch ON, circuit breaker in. FORCE TRIM on. G2, D13
- C** 4. Primary directional control electro-mechanical disconnect -- Check as follows (if installed): H21 - 23
 - a. PRI DIR CONT switch -- DISENG. The DISENG light should illuminate.

PROCEDURE

TROUBLESHOOTING
REFERENCE

ENGINE RUNUP CHECKS (CONT)

- b. PRI DIR CONTswitch -- ENGAGE. The
DISENG light should go out.

NOTE

Only physical movement of the yaw control tube will
assure proper operation of the jam light. The jam
light check is not a required part of this check.

CAUTION

Observe engine overspeed limitations during
checks 5 and 6.

5. Throttle -- Slowly increase to full open, **A**
98%, **A-720** **C** 95% N2 RPM. Check
all instrument and lights are normal.
Check for high frequency vibrations.
6. GOV RPM Switch -- Carefully increase to
A 104% to 106% , **A-720** **C** 101% to
103%. Check for approximately 17%
spread. Decrease to **A** 98%, **A-720**
C 95% and note travel time of 5 to 10
seconds. Actuator should operate
smoothly. Increase to **A** 103%, **A-720**
C 100% N2.

PROCEDURE

TROUBLESHOOTING
REFERENCE

ENGINE RUNUP CHECKS (CONT)

7. Compressor Bleed Valve Check:

NOTE

Ensure aircraft and engine are properly prepared for this check. Refer to **A** TM 55-2849-231-23 or **A-720 C** TM 55-2840-241-23. Ensure all bleed air is off.

- a. Have observer with flashlight monitor bleed valve. For communication between pilot and observer, use helmets and extension cord to passenger communication box.
- b. If bleed valve is not in the closed position, apply collective until valve is fully closed.

NOTE

If FAT is 17 °C or higher, it may be necessary to increase helicopter gross weight.

- c. With bleed valve closed, friction collective and reduce throttle to engine idle. Let N2 stabilize. Observer should check that bleed valve is fully open.
- *d. Slowly increase throttle until observer indicates bleed valve starts to close. Record N1.

PROCEDURE

TROUBLESHOOTING
REFERENCE

ENGINE RUNUP CHECKS (CONT)

- *e. Continue to increase throttle until ob- E14, 16
server indicates bleed valve is fully E17
closed. Record N1.
8. Collective -- Down, friction off, N2 **A**
103%, **A-720** **C** 100%.
9. Check compressor bleed valve chart for
correct operating range of the bleed
valve. Refer to **A** TM 55-2840-231-23
or **A-720** **C** TM 55-2840-241-23.

CAUTION

Ensure aircraft and engine are prepared for flight
after above check.

CAUTION

If torsional oscillation does not dampen by 10
cycles, the throttle will be immediately retarded to
eliminate the effect of an unstable N2 governor. If
torsional oscillation is not corrected and exceeds 10
cycles, damage to the aircraft may occur.

CAUTION

Brief copilot / observer to guard pedals by placing
his feet approximately 2 inches from the pedals to
ensure pilot does not exceed pedal travel limits.

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

ENGINE RUNUP CHECKS (CONT)

- | | | |
|------|--|----|
| *10. | Torsional Oscillation Check -
Induce oscillation by making short, quick inputs on the anti-torque pedals. Limit pedal travel to 1 inch. Oscillations should dampen out prior to a maximum of 10 cycles. Monitor N2 tach and torque for excessive oscillation. | J5 |
|------|--|----|

NOTE

Torsional oscillation check must be performed after an engine change, phase inspection, or a change of or adjustment of the engine fuel control, N2 governor, double check valve, accumulators or fuel control air lines.

- | | | |
|-----|---|--------------------|
| *11 | Fuel Boost Pump Check: | |
| a. | FUEL BOOST PUMP circuit breaker - Out. Check FUEL BOOST caution light on, reset CAUTION panel lights, MASTER CAUTION light out, stabilize 30 seconds. | C29, 31
C32, E2 |
| b. | Throttle - To engine idle, stabilize 15 seconds, check for stable N1. | |
| c. | FUEL BOOST PUMP circuit breaker - In. Note no more than 5 amp increase in AMPS (meter) and FUEL BOOST caution light out. | C16, 31
D4, E2 |

PROCEDURE

TROUBLESHOOTING
REFERENCE

ENGINE RUNUP CHECKS (CONT)

*12. Engine Idle Speed:

NOTE

Dual control installation requires an idle speed check from the copilot's side also. Idle speed may be approximately one-half percent higher on copilot's twist grip, but no lower.

GENERator switch -- OFF. If the E3, 4,9 amperes are above 20 amps, check engine idle speed 62 to 64% N1.

13. Gas Producer Fuel Control Deceleration Check -- Complete (if required) as follows: A12

a. Collective -- Down.

b. Throttle -- Full open, N2 RPM **A** 103%, **A-720** **C** 100%. Stabilize at least 15 seconds.

c. Throttle -- Idle. Simultaneously start time.

d. As N1 passes through 65%, note time.

NOTE

Practice and / or retakes may be required before proficiency is obtained in timing the deceleration.

PROCEDURE

TROUBLESHOOTING
REFERENCE

ENGINE RUNUP CHECKS (CONT)

- e. Check deceleration time. Minimum allowable time is 2 seconds. If deceleration is less than 2 seconds, make two more checks to confirm the time.
 - f. If deceleration time is less than 2 seconds, the aircraft will not be flown until corrective action is accomplished. Refer to **A** TM 55-2840-231-23 or **A-720 C** TM 55-2840-241-23.
14. Generator Switch -- GEN. Generator light out. C6-10
D3, 12
 15. AMPS -- Check indication. AMPS must indicate 60 or less before the inverter is turned on.
 16. INVERTER switch -- ON / OFF flags on RBI and/or attitude indicator should not be visible after 3 minute max. B14, 20
C12, 13
16, D1
Check INST INVERTER caution light out. 3,11
 17. Avionics On. Note no fluctuation of ammeter while turning avionics on. C16, D17
K1, 3,
4, 5
 18. Throttle -- Increase smoothly to full open, increase N2 RPM to **A** 103%, **A-720 C** 100% with governor control.

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

ENGINE RUNUP CHECKS (CONT)

- | | | |
|-----|---|-----------------|
| 19 | Engine Deice Check - ENG DEICE switch - ENG DEICE, note approximately 20°C TOT rise. ENG DEICE switch, OFF, note TOT decrease to normal. Set switch as required for conditions. | C16, 30,
E13 |
| 20. | Pitot Heater Check - PITOT HTR switch - PITOT HTR, note rise in AMPS. PITOT HTR switch, OFF, note decrease in AMPS. Set switch as required. | C14, 16 |
| 21. | DEFOG & VENT check - DEFOG & VENT switch - DEFOG & VENT. Note rise in AMPS and swing in mag compass. Note both blower motors operate properly and check for excessive noise in headset, caused by blower motors or failure of noise suppressors. Check proper operation of defog and vent pull levers. | C16, 23,
24 |
| 22. | Heater Check - HTR switch - HTR, check no TOT rise or warming air from outlets. Rotate HEAT rheostat on, check approximately 20°C TOT rise and warming air from outlets near pilot's and copilot's sticks and outlets near both door posts in passenger compartment. Close outlets and check for warming air from defog vents. DEFOG & VENT switch - OFF, defog and vent levers in, HTR switch - OFF. Check for drop in TOT and AMPS. | E32, 33,
34 |

PROCEDURE

TROUBLESHOOTING
REFERENCE

ENGINE RUNUP CHECKS (CONT)

*23. Record following Instrument Indications:

a. N1 -- Stabilized. E9, 22

b. TOT -- Note stabilized and normal for B21 - 24
ambient condition. E9

c. ENG OIL TEMP -- Note stabilized and B33, 34
normal for ambient condition.

d. ENG OIL PRESS -- Note stabilized and B29, 32
as required for N1 speed.

C e. XMSN OIL pressure -- Note stabilized and B35, F1
between 40 to 60 psi.

f. TORQUE meter -- Note stabilized and B8 - 10
reading between **A** 22 and 28 PSI, E35
A-720 **C** 23 and 29%.

A 24. Auto Engine Oil Bypass Check -- ENG
A-720 OIL bypass switch -- AUTO. Hold caution
panel TEST / RESET switch in
TEST. Note approximately 15° C rise in
engine oil temp. Release TEST /
RESET switch, ENG OIL bypass switch
-- OFF. Note decrease in engine oil
temp.

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

ENGINE RUNUP CHECKS (CONT)

- | | | |
|------|--|-------------------------|
| 25. | Dual Tach - Note needles joined and steady. | B11-13
B26 |
| 26. | Perform avionics checks IAW applicable TMs. | |
| 27. | RBI - Check nulled and proper indication. | B20 |
| 28. | Flight instruments - Check normal, set altimeter to current setting. (+/- 70 feet maximum error) | B15,16
B17,19
B20 |
| 29. | Cyclic and collective friction - As desired (recommended OFF for test flight). | |
| 30. | FORCE TRIM - As desired (recommended OFF for test flight). | |
| *31. | HIT Check - Complete. | A13, E6 |

NOTE

HIT check may be deferred until arrival in test flight hover area if conditions in runup area preclude accurate and/or safe completion of check. HIT check must be completed prior to takeoff.

PROCEDURE

TROUBLESHOOTING
REFERENCE

BEFORE TAKE OFF CHECKS

1. N2 **A** 103%, **A-720** **C** 100%.
2. Warning Lights -- Out.
3. Engine Instruments -- Normal range.
4. Fuel -- Check quantity.
5. Caution Lights -- Out.

CAUTION

Seat belts and shoulder harnesses must also be properly fastened and tightened when seats are not occupied.

6. Crew, Mission equipment and Seat belt (inside aircraft) -- Check.
7. Transponder -- As required.
8. Doors -- secure.

PROCEDURE

TROUBLESHOOTING
REFERENCE

AIRCRAFT HOVER CHECKS

1. Takeoff to Hover -- Carefully bring helicopter to a 3-foot hover. Closely monitor control response and predicted C.G. hang as aircraft departs ground. Observe copilot controls are positioned approximately the same as pilot controls, ensure droop compensation maintains constant N2 speed of **A** 103%, **A-720** **C** 100%, and check all instruments normal. Turn helicopter into the wind and check cyclic, collective, and pedals are positioned normally for conditions and power required.

E9, 16
E19 -23
E31
G3, 4
H1,3,4
H7, 15
H18, 19
J3, 4

NOTE

During hover checks, check operation of flight instruments as necessary.

- *2. Hover Power Check -- While at a stabilized 2-foot hover into the wind, record torque, TOT and N1. Readings should be normal for conditions. Ensure adequate power margin exists I/A/W ATM requirements.

B8, 9
B10, E9
E18
3. Check parking area for indication of leaks.
4. Slowly hover to test flight area.

PROCEDURE

TROUBLESHOOTING
REFERENCE

AIRCRAFT HOVER CHECKS (CONT)

NOTE

If HIT check has been deferred, performance of the check is required at this time.

5. With aircraft into the wind, check H3, 4, 19 controllability of tail rotor by making J3, 4 pedal turns 90° left and right.

- * **C** Primary Directional Control Check:
(If installed)

CAUTION

Should pedal control become difficult or should pedal contact stops, immediately terminate the check, land the aircraft, and make an entry in DA Form 2408-13.

- a. Land Aircraft.
- b. Place the PRI DIR CONTROL switch to the DISENG position. DISENG light should illuminate.

NOTE

JAM light will not illuminate with the PRI DIR CONTROL switch in the DISENG position

- c. With the aircraft headed into the wind, smoothly apply collective pitch until a 3-foot hover is attained. Check controllability of tail rotor by making pedal turns 90° left and right.

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

AIRCRAFT HOVER CHECKS (CONT)

- d. Land aircraft.

- e. PRI DIR CONTROL switch - H19
 ENGage. Note JAM light H21-23
 illuminates. Move pedals slightly
 to reengage system - Note
 DISENG light out.

- f. PRI DIR CONTROL switch -
 RESET. Note JAM light out.

- 7. With aircraft headed into the wind, G 1, 3, 4
 perform sideward flight in both H 1, 3, 4
 directions to check cyclic response H15, 16
 and rigging. Limit ground speed H17, J3,
 to 5 kts. 4

- 8. While maintaining 5 feet AGL, fly G 1, 3, 4
 forward into the wind until effective H 1, 3, 4
 translational lift is reached. Check H15-18
 cyclic response and rigging, J2, 3, 4
 abnormal vibrations, and/or flight
 control displacement.

- *9. Pylon Isolation Mount Check - F4, G3
 While maintaining a 3-foot hover, G4, 8
 move the cyclic fore and aft (about J2
 2 to 3 inches) fairly rapidly along a
 straight line to induce an extremely
 low frequency vibration. Stop the
 cyclic in the neutral position and
 check that the vibrations dampen
 out prior to 5 cycles. No abnormal
 vibrations or engine surges are
 allowed.

PROCEDURE

TROUBLESHOOTING
REFERENCE

AIRCRAFT HOVER CHECKS (CONT)

10. Land aircraft.

*11. Power Cylinder Check:

CAUTION

Brief copilot/observer to hold HYD BOOST switch throughout the following check. Should cyclic jam or become hard to move, instruct copilot/observer to turn the HYD BOOST switch off, then on. If cycling the switch does not release controls, turn HYD BOOST switch off and accomplish a hydraulics off landing.

- | | |
|--|---|
| <p>a. Climb and maintain a 10-foot hover, smoothly move the cyclic along a straight line from left rear to right forward. The length of cyclic movement should be approximately 6 inches either side of the center position. No restriction to movement should be felt and the HYD PRESS caution light should not illuminate. This check is primarily a flow capacity check of the hydraulic pump.</p> | <p>G 1, 3
G4, 6-9
H1, 17
J3</p> |
| <p>b. Repeat the procedure moving the cyclic from right rear to left forward.</p> | |

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

AIRCRAFT HOVER CHECKS (CONT)

- c. Return to normal hover altitude upon completion of the check.

CAUTION

Do not exceed helicopter limits during power application.

CAUTION

N2 may temporarily overspeed or underspeed the RPM selected for a period of approximately 2 to 5 seconds if the collective is moved abruptly.

- *12. Engine Response Check -- While main- E9, 16
taining all instruments within normal ran- E22, 23
ges, make a positive increase in E31
collective and check for nearly instan-
taneous increase in N1 speed (less than
one second). Stop ascent before exces-
sive altitude is gained (20-25 feet) and
descend to normal hover altitude. En-
gine should respond smoothly and rapid-
ly.

- 13. Before Takeoff Check:

- a. N2 **A** 103%, **A-720** **C** 100%.

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

AIRCRAFT HOVER CHECKS (CONT)

- b. Warning Lights - Out
- c. Engine Instruments - Normal range.
- d. Fuel - Check quantity.
- e. Caution Lights - Out.

CAUTION

Seat belts and shoulder harnesses must also be properly fastened and tightened when seats are not occupied.

- f. Crew, Mission equipment and Seat Belt (inside helicopter) - Check.
- g. Transponder - As required.
- h. Doors - Secure.

INFLIGHT CHECKS

CAUTION

If excessive vibrations are felt or other indications exist that preclude further safe flight, land and/or return to maintenance area and correct before continuing.

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

INFLIGHT CHECKS (CONT)

1. Takeoff:

E16, 18-

- a. Perform normal takeoff (500 FPM -- 60 E23, 29 KIAS). Check that control position and G1, 3, 4 instrument indications are normal for H1, 3, 16 conditions. H17

J1, 2, 3

- b. Initiate fuel consumption check.

*2. Control Rigging Check:

NOTE

Perform checks 2 thru 6 into the wind.

- a. While maintaining aircraft in trim, increase airspeed to 100 KIAS using A H8 - 16 60 PSI, A-720 C 65% torque . Force trim on. Check that cyclic remains in place when hand pressure is relaxed. Force trim off. E16, 29

- b. Check pedal position. One or two inches of forward right pedal is normal. Relax pedal pressure. Pedals should not creep. One-half inch of forward right pedal is normal after compliance with MWO 55-1520-228-50-25. J1, 2,3 H19

NOTE

Inflight pedal position is an approximate indicator. Primary check for tail rotor rigging will be accomplished before aircraft is released for test flight.

PROCEDURE

TROUBLESHOOTING
REFERENCE

INFLIGHT CHECKS (CONT)

- *3. Autorotation RPM:

WARNING

If autorotation RPM cannot be maintained in the green, terminate the test flight.

CAUTION

Autorotation will be entered at an altitude that will allow power recovery to be completed prior to 500 feet AGL.

NOTE

Ensure engine deice and/or bleed air is off prior to next check.

- a. While keeping a suitable landing area within reach at all times, autorotate at 55 KIAS into the wind. Do not allow rotor RPM to exceed limits. Stabilize autorotation, note N1%, and record rotor RPM. Check adequate pedal to maintain trim and no unusual cyclic position required to maintain desired attitude. Note vibration level or a marked decrease in vibration level. Note torque at/or near zero and no warning or caution lights on. Initiate power recovery for the autorotation.

PROCEDURE

TROUBLESHOOTING
REFERENCE

INFLIGHT CHECKS (CONT)

- b. After power recovery, compare B12, 26 autorotation RPM against figure F10, H3 below, and adjust as necessary. In no event should rotor RPM be set to exceed **A** 390 RPM, **A-720** **C** 110% at max gross weight or **A** 330 RPM, **A-720** **C** 93% at min gross weight.

Approx. Mission Gross Weight	Approx. RPM @ 55 KIAS
A 2600 lbs	354% ± 5
A-720 C 2700 lbs	100% ± 1%

NOTE

Autorotational RPM will vary significantly with gross weight and ambient conditions.

*4. Engine Performance Check:

- a. An engine performance check (EPC) is required after any of the following maintenance actions are completed:

NOTE

Fuel control air lines are the air lines between the fuel control and the governor, i.e., Pr, Pg, Py, and Pc from the "TEE" fitting the the fuel control.

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

INFLIGHT CHECKS (CONT)

- (1) Removal / installation / reinstallation of the engine.
- (2) Anytime poor performance is noted.
- (3) Removal / reinstallation/ installation of gas producer fuel control (GPFC), adjustment of maximum fuel flow (max speed stop adjustment), rigging of GPFC arm to contact maximum stop on fuel control or adjustment of the Start / Acceleration screw.
- (4) Removal / reinstallation/ installation of governor (GOV), or droop compensator.
- (5) Removal / reinstallation/ installation / repair of compressor, fifth stage bleed valve, double check valve, and accumulators.
- (6) Replacement of FAT gage for error.
- (7) Calibration / replacement of torque or TOT indicating system.

PROCEDURE

TROUBLESHOOTING
REFERENCE

INFLIGHT CHECKS (CONT)

- (8) Anytime the fuel system control air lines are loosened / installed.

CAUTION

Transient droop may occur and N2 speed may droop below **A** 103% N2, **A-720** **C** 100% N2. This droop must recover within 5 seconds.

CAUTION

Do not exceed any operating limitations.

NOTE

Maximum power available is achieved when the limits of either TOT, torque, or N1 speed are reached at **A** 103% N2, **A-720** **C** 100% N2.

NOTE

Ensure all bleed air systems are off prior to check.

b. Perform check as follows:

- (1) Establish cruise flight at an altitude of 500 feet AGL or above.
- (2) Set altimeter to 29.92.

PROCEDURE

TROUBLESHOOTING REFERENCE

INFLIGHT CHECKS (CONT)

- (3) Select a test altitude.
- (4) Turn aircraft into the wind and initiate a climb at 70 KIAS.
- (5) Climb power should be adjusted as required to avoid prolonged operation in the yellow range of TOT or torque.
- (6) At approximately 300 feet prior to the test altitude, power should be increased slowly to reach the limit of TOT, torque, or N1 as the aircraft arrives at the test altitude.
- (7) Upon reaching the test altitude, record the following,
 - (a) Torque.
 - (b) N1.
 - (c) TOT.
 - (d) Test Altitude.
- (8) Return to the test altitude, allow the FAT gauge to stabilize and record the actual FAT.

PROCEDURE

TROUBLESHOOTING
REFERENCE

INFLIGHT CHECKS (CONT)

- (9) Refer to Chapter 7 of TM 55-1520-228-10 and select the appropriate Maximum Torque Available Chart (30 minute operation). Enter the chart at the elected test altitude, move right to the FAT and the down to the torque value required. Compare the actual torque recorded with the torque shown on the chart.
- (10) If the actual torque recorded meets or exceeds the chart torque value, continue the test flight.
- (11) If the actual torque recorded less than the chart torque value or if the limit of either N1 speed or TOT is reached and / or N2 is below **A** 103%, **A-720** **C** 100%, discontinue the test flight and refer to **A** TM 55-2840-231-23 or **A-720** **C** TM 55-2840-241-23 for troubleshooting procedures.

PROCEDURE

TROUBLESHOOTING
REFERENCE

INFLIGHT CHECKS (CONT)

NOTE

Ensure the correct chart was used and the torque required was computed accurately.

- (12) Reset the altimeter to the current setting.

NOTE

If more than one engine performance check is performed, allow at least five minutes at cruise power setting between checks.

- *5. Hydraulic Off Check:

CAUTION

If a copilot/observer is used, brief not to remove hand from HYD BOOST switch until instructed to do so. If any control problems or abnormal forces are encountered, the copilot/observer should be instructed to place the HYD BOOST switch on.

- a. While maintaining approximately 70 KIAS for easier controllability, turn HYD BOOST switch - Off. Check that the cyclic is easily controlled in all quadrants and no abnormal forces are present, More force should be needed to move the cyclic right forward than left forward.
- D3
G2, 5

PROCEDURE

TROUBLESHOOTING
REFERENCE

INFLIGHT CHECKS (CONT)

b. Decrease and increase collective G5, G5, H20 and check that at least A 16 PSI, D13 A-720 C 17% down and A 76 PSI, A-720 C 83% up can be reached without excessive pressure. Do not exceed any limitations during this check. HYD BOOST switch on. Record actual PSI or % reached.

*6. Vibration Analysis -- Complete. See section IV for detailed procedures and Section III, J Troubleshooting References).

*7. Flight Instruments Check -- Fly at different attitudes and airspeeds to check performance of flight instruments.

NOTE

Eliminate or minimize all main rotor vibrations prior to the following checks.

- | | | |
|----|---|-----|
| a. | Airspeed indicator -- Check approximately 80 KIAS at hover torque setting and no excessive fluctuation. | B16 |
| b. | IVSI -- Proper indication for straight and level flight (+/- 50 FPM). | B16 |

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

INFLIGHT CHECKS (CONT)

- | | | |
|-------------|--|-----|
| c. | Attitude indicator - Correct indication, no excessive oscillation or precession. | B14 |
| d. | Turn and slip indicator - Check proper indication, freedom of movement, no large fluctuations. Perform time turns. | B17 |
| e. | Mag compass - Check flying over known heading, no excessive fluctuation. | B19 |
| f. | RBI - Check flying over known heading, smooth operation during turns, no binding or fluctuation. No excessive oscillation or precession. | B20 |
| g. | Clock - Check still operating and indicating correct time. | B18 |
| C h. | Radar altimeter - Check for proper operation (if installed). | B15 |
| i. | All instruments - No excessive vibrations or fluctuation of instruments, mounts or frames. Observe for looseness or cracks at pedestal mounts. | B26 |
| j. | Complete fuel consumption check. | |

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING
REFERENCE

INFLIGHT CHECKS (CONT)

*8. Communication and Navigation
Equipment Check:

- a. Transponder - Contact radar controller and request a transponder check to include EMER mode. K1

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

INFLIGHT CHECKS (CONT)

- | | | |
|----|--|--------|
| b. | ADF - Fly over operational NDB station maintaining visual track. Check proper operation. | K4 |
| c. | FM radios - Check reception and transmission capability on at least 2 frequencies. Check homing indication on one frequency. | K1,2,3 |
| d. | VHF radio - Check reception and transmission capability on at least 2 frequencies, and guard. | K1,2 |
| e. | UHF radio - Check reception and transmission capability on at least 2 frequencies, and guard. | K1,2 |
| f. | KY-58 and T-SEC 1/A - Check, (if installed). | K5 |
| g. | AN ARN - 123 - Fly ILS and VOR instrument approaches maintaining visual track. Check proper operation (if installed). | K1,2,4 |
| 9. | CS ATAS Missile System Check - Complete. (See Section IV for detailed procedures and Section III, L Troubleshooting References.) | L4-13 |

PROCEDURE

**TROUBLESHOOTING
REFERENCE**

BEFORE LANDING CHECKS.

1. N2 -- **A** 103%, **A-720** **C** 100%.
2. Systems -- Check.
3. Crew -- Check.
4. Landing Light -- As required. C21,22

AFTER LANDING CHECKS

1. Landing Light --As required.
2. Transponder -- As required.

ENGINE SHUTDOWN CHECKS.

1. LDG LTS -- OFF
2. Collective -- Full down.
3. FORCE TRIM -- FORCE TRIM. H8
4. Cyclic and Collective Friction -- On.
- *5. Battery Check -- BAT switch -- OFF. If C1, 2, 6 drop in AMPS is less than 5 amps, the battery is fully charged. BAT switch -- BAT.
6. Note and Record Following Instruments -- N1, TOT, ENG OIL TEMP, ENG OIL PRESS (as required for N1 speed), **C** XMSN OIL PRESS, and TORQUE.

PROCEDURE

TROUBLESHOOTING
REFERENCE

ENGINE SHUTDOWN CHECKS (CONT)

7. Avionics, Electrical Switches -- Off, except GEN, BAT, and ANTI-COLLISION LTS.

NOTE

Raise collective approximately one inch prior to the next check.

- *8. ROTOR RPM light and audio check -- E1, B28
Slowly reduce throttle. Check low rotor RPM audio activates and ROTOR RPM light is on at **A** 335 ± 5 , **A-720** **C** $95\% \pm 1.4\%$ rotor RPM. When audio activates, lower collective and reduce throttle to engine idle stop.
9. Special Equipment -- Perform operational checks on all special equipment installed.

CAUTION

If throttle is inadvertently rolled to the off position, do not attempt to roll it back on. Perform a hot start emergency shutdown if it appears that TOT limits will be exceeded.

10. Idle Cutoff Check:

NOTE

Allow TOT to stabilize for two minutes before performing idle cutoff check.

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

ENGINE SHUTDOWN CHECKS (CONT)

- a. Rotate throttle 1/16 inch below engine idle stop. E3, 35
- b. Stabilize for 15 seconds, N1 must remain stable and engine must not quit.
- 11. Engine Shutdown - Close throttle, check ENGINE OUT light on by 55 +/- 3 N1 Listen for abnormal noises, monitor TOT. B 1,2
E24-28
E35
- 12. FUEL BOOST switch - OFF.
- 13. GENERator switch - OFF.
- 14. Lights - OFF when rotor is stopped.
- 15. BATtery switch - OFF.
- 16. Starter/Ignition Lock Switch - Off, remove key.

CAUTION

Do not drop seat belt against side of helicopter. Buckle and bracket will damage honeycomb panel under crewmember door frame.

- 17. Main Rotor Blade - Tie down.
- 18. Engine Inlet Covers - Installed.

TM 55-1520-228-MTF

PROCEDURE

TROUBLESHOOTING REFERENCE

ENGINE SHUTDOWN CHECKS (CONT)

- *19. Post Flight Inspection - Completed.
- 20. Checksheet - Signed.
- 21. All Entries from "Remarks" Column of Checksheet - Transcribed to DA Form 2408-13.
- 22. Aircraft - Secured.
- 23. Maintenance Personnel - Debriefed as necessary.

SECTION III. TROUBLESHOOTING GUIDE

General. This section contains troubleshooting information that has been referenced in Section II checklists. This section shall list possible condition, abnormal conditions and indications and probable causes. The information is to be used only as a quick reference and may not be all encompassing.

TROUBLESHOOTING GUIDE A - STARTING CONDITION

PROBABLE CAUSE

A1. No start action.

- a. Circuit breaker out.
- b. Battery power low.
- c. Battery cable connector is not properly connected.
- d. Starter switch inoperative.
- e. Starter brushes excessively worn.
- f. Faulty starter relay.
- g. Faulty starter.
- h. Wiring to starter shorted or broken.
- i. Internal seizure of engine.
- j. Starter/ignition lock switch not on.

TM 55-1520-228-MTF

A2. No N1 indication, but starter turns.

- a. Faulty N1 tachometer transmitter or instrument.
- b. Wiring open or shorted.
- c. Starter drive failed.
- d. Accessory gear box internal failure.

A3. Unable to get sufficient N1 RPM for start.

- a. Weak battery output.
- b. GPU underrated, (if used).
- c. Too much electrical drain on battery.
- d. Internal failure of engine.

A4. Engine fails to light off.

- a. Air in fuel lines.
- b. Faulty spark igniter.
- c. Faulty circuit to ignition unit.
- d. Faulty ignition exciter.
- e. Engine driven fuel pump inoperative. (Fuel vapor not observed leaving the exhaust.)
- f. Fuel nozzle flow obstructed.
- g. Gas producer fuel control remains in cutoff.
- h. Contaminated fuel.

- i. Fuel line disconnected.
- j. Insufficient fuel in tank.

A5. Engine lights off but will not accelerate to idle speed in 45 seconds.

- a. Inadequate torque at starter pad.
- b. Air in fuel control.
- c. Pneumatic air leak.
- d. Defective fuel control.
- e. Defective power turbine governor.
- f. Start derichment valve out of adjustment.
- g. PC filter clogged.
- h. Starter-generator improperly wired at the starter-generator's lead .

A6. Acceleration temperature too high during start.

- a. Dirty particle separator or compressor.
- b. Obstructed air inlet.
- c. Battery weak.
- d. Residual TOT in excess of 200° C prior to start.
- e. Throttle improperly rigged.
- f. Leaking engine anti-icing valve or lines.
- g. Faulty gas producer fuel control or start derichment is set too rich.
- h. Starter-generator improperly wired at the starter-generator's lead d.

TM 55-1520-228-MTF

- h. Faulty starter which is not capable of dry motoring gas producer N1 above 15%,
- i. FOD or erosion to compressor.

A7. Normal start, rotor turns but no N2 indication.

- a. Faulty tachometer instrument, transmitter, or wiring.
- b. N2 gear box internal failure.

A8. Main rotor not turning by 30% N1, no N2 indication, but normal N1 and TOT indications.

- a. Rotor still tied down, either main or tail.
- b. Foreign object binding tail rotor drive.
- c. Transmission or gear box failure.
- d. N2 turbine failed or locked. (Do not turn backwards).
- e. Engine gearing failure.

A9. Unintentional start termination.

- a. Starter switch released too soon.
- b. Fuel valve shut off.
- c. Circuit breaker pops (starter or ignition).
- d. Starter failure (electrical or mechanical).
- e. Ignition system failure.
- f. Fuel control malfunction.

TM 55-1520-228-MTF

A10. Main rotor not turning by 30% N1 but normal N1, N2, and TOT indication.

- a. Engine driveshaft failure.
- b. Freewheeling unit failure.
- c. Transmission failure.

A11. Engine continued to accelerate above 64% N1.

- a. Throttle positioned above engine idle.
- b. Engine idle improperly rigged.
- c. Fuel control malfunction.

A12. Gas producer fuel control deceleration check time is less than allowable.

- a. Generator on during check.
- b. Perform rigging checks (N1 and N2).
- c. Perform pneumatic leak check.
- d. Perform engine performance check to confirm air leaks.
- e. Replace fuel control.

A13. HIT check, high TOT.

- a. Dirty compressor.
- b. Bleed air leaks.
- c. Restriction to air inlet.
- d. Faulty TOT indicating system.

TM 55-1520-228-MTF

- e. Compressor FOD.
- f. Aircraft not turned into the wind.
- g. Chart computation in error

TROUBLESHOOTING GUIDE B - INSTRUMENTS

CONDITION

PROBABLE CAUSE

B1. ENGINE OUT light or low ROTOR RPM light inoperative.

- a. Caution panel circuit breaker out.
- b. Faulty warning system lights.
- c. RPM sensors inoperative.

B2. Engine out or low rotor RPM audio inoperative.

- a. Headset not plugged in completely.
- b. Caution panel circuit breaker out.
- c. Collective stick not raised the proper distance.
- d. Faulty tone generator.
- e. Faulty RPM sensor (N1 or rotor).
- f. Engine out warning switch sticking.

B3. Fuel quantity indicator reads low.

- a. System out of adjustment.
- b. Tank unit has low capacitance.
- c. Indicator defective.
- d. Low fuel.
- e. Low battery voltage.

B4. Fuel quantity indicator reads high.

- a. System out of adjustment.
- b. Indicator defective.
- c. Tank unit shorted.

B5. Fuel indicator remains at one point.

- a. No DC power.
- b. Defective indicator.
- c. Coaxial lead grounded.

B6. Fuel indicator remains at zero or below.

- a. Open or broken wiring.
- b. Reversed polarity.
- c. Indicator failure.

B7. No torquemeter indication after start.

- a. Faulty indicator.
- b. Clogged, disconnected, or broken pressure line.
- c. No oil in system.
- d. Torquemeter internal system malfunction.

B8. Torquemeter fluctuates - no other instruments fluctuating.

- a. Restriction in pressure line.
- b. Faulty indicator.

- c. Air in pressure line.
- d. Engine oil pressure improperly adjusted.

B9. Low torquemeter indication.

- a. Faulty indicator.
- b. Low engine oil pressure.
- c. Clogged pressure line.
- d. Gross weight lower than computed.
- e. Performance Planning Card incorrect.

B10. High torquemeter indication.

- a. Faulty indicator.
- b. Oil pressure and torquemeter lines switched.
- c. Performance Planning Card incorrect.
- d. Torquemeter internal system malfunction.

B11. Rotor and N2 needles not joined.

NOTE

Normal unless not joined at higher ranges

A **A-720** 97%.

- a. Instrument or tachometer generator malfunction.
- b. Wrong instrument installed.

TM 55-1520-228-MTF

B12. N2 tachometer fluctuates - no other engine instrument fluctuating.

- a. Instrument or tachometer generator malfunction, wiring loose, moisture in connector plugs.
- b. Faulty double check valve.
- c. Faulty gas producer fuel valve.
- d. Faulty N2 governor.

B13. N2 tachometer error.

- a. Faulty instrument or tachometer generator.
- b. Wrong instrument or generator installed.

B14. Attitude indicator does not work properly.

- a. AC power failure.
- b. Circuit breaker out.
- c. Loose connections.
- d. Improper inverter output, voltage, or cyclic rate.
- e. Faulty inverter input voltage.
- f. Faulty indicator.

B15. Altimeter reads incorrectly or fluctuates excessively.

- a. Leak in static lines.
- b. Clogged port or line.

- c. Defective instrument.
- d. Water in static system.
- e. Faulty indicator.
- f. **C**No electrical power to instrument.

B16. Airspeed indicator and/or IVSI reads incorrectly or fluctuates excessively.

- a. Gusty winds.
- b. Pitot tube restricted.
- c. Static port or line clogged by water or dirt.
- d. Leak in lines.
- e. Defective indicator.

B17. Turn and slip indicator needle erratic or inoperative.

- a. Sticking gyro.
- b. Loose wire or connection.
- c. No electrical power to indicator.
- d. Defective instrument.

B18. Clock not accurate.

- a. Not wound.
- b. Defective clock.

TM 55-1520-228-MTF

B19. Magnetic (standby) compass inaccurate, sluggish, or erratic.

- a. Improper compensation.
- b. Mounting bracket loose.
- c. External magnetic interference.
- d. Landing light on.
- e. Defective instrument.

B20. GYRO - Syn inaccurate or erratic.

- a. Compass slaving switch in MAG position or defective.
- b. Improper adjustment of transmitter unit.
- c. External magnetic interference.
- d. Indicating system malfunction.
- e. Gyro-Syn compass control malfunction.
- f. AC voltage or cycles not correct.

B21. TOT fluctuating, no other engine instruments fluctuating.

- a. Faulty indicating system
- b. Loose connections.

B22. TOT shows excessive temperature (incorrect reading).

- a. Incorrect resistance spool.

TM 55-1520-228-MTF

- b. Cracked or broken TOT wires.
- c. Indicator in need of calibration.

B23. TOT shows no reading on indicator.

- a. Loose connections on indicator lead spool resistor or terminal block.
- b. Open circuit in indicator.

B24. TOT shows incorrect reading.

- a. Harness not calibrated.
- b. Defective gage
- c. Improper hardware installed.

B25 Warning lights press-to-test inoperative.

- a. Faulty circuit or switch.
- b. Bulbs burned out.
- c. Dirty contacts.

B26. Excessive instrument vibration.

- a. Main rotor severely out of track.
- b. Mount of instrument loose or cracked.

B27. FAT gage reading incorrect for known actual ambient temperature.

- a. Gage inoperative.
- b. Gage probe damaged (overtorqued mount nut).

- c. Direct sun rays on probe (normal).

B28. Rotor RPM light and / or audio warning not on below **A 330 RPM, **A-720** **C** 93% rotor RPM.**

- a. Rotor sensor inoperative.
- b. Audio transmitter inoperative.
- c. (Audio) Collective is not raised high enough or engine out warning switch sticking.
- d. Rotor transmitter inoperative.
- e. Rotor or audio connector plugs disconnected.

B29. No engine oil pressure indication.

- a. Engine oil pump inoperative.
- b. Engine oil pressure line broken prior to reaching indicator.
- c. Defective engine oil pressure indicator.
- d. Engine oil pump prime has been lost.

B30. Low engine oil pressure.

- a. Restriction in oil line going to indicator.
- b. Increase in oil pump internal clearance.
- c. Oil filter element restricted or oil contamination.
- d. Defective engine oil pressure indicator.
- e. Oil pressure regulator valve improperly adjusted.
- f. Lack of oil in reservoir.

TM 55-1520-228-MTF

B31. Excessive oil pressure fluctuation.

- a. Defective engine oil pressure indicator or regulator.
- b. Air in pressure line.
- c. Oil leaks.
- d. Oil contamination and foaming.
- e. Restriction in oil filter or pressure regulator.
- f. Low oil supply.
- g. Defective oil pump or pump inlet restricted.
- h. Restriction in pressure line.
- i. Internally kinked or twisted engine oil inlet line.

B32. High oil pressure.

- a. Defective engine oil pressure indicator.
- b. Pressure regulator valve improperly adjusted.
- c. Contaminated or improper oil.

B33. High engine oil temperature with normal oil pressure.

- a. Defective engine oil temperature gage.
- b. Defective bypass valve or low level warning switch.
- c. Defective engine oil temperature bulb.
- d. Improper air flow to oil cooler area.

e. Contaminated or improper oil.

B34. ENG OIL BYPASS light illuminates with a rise in engine oil temp and auto engine oil bypass switch in off position.

a. Defective or improperly wired auto eng oil switch.

b. Shorted wire from low level warning switch to master caution panel.

c. Engine oil leak or low oil.

B35. C XMSN pressure gage no reading, reads low, reads high, or erratic.

a. Defective transmitter.

b. Defective gage.

c. XMSN oil pressure regulator defective.

d. No XMSN oil pressure regulator defective.

d. No XMSN oil pressure.

e. Defective wiring or circuit breaker open.

f. XMSN oil low.

B36. A A720 No rise in engine oil temp when auto oil switch is in auto and caution panel test switch is in test position.

a. Defective or improperly wired auto eng oil switch.

b. Broken wire from caution panel to oil tank.

c. Defective bypass switch at oil cooler.

**TROUBLESHOOTING GUIDE C - ELECTRICAL
CONDITION**

PROBABLE CAUSE

C1. Battery will not hold charge.

- a. Charging rate too low.
- b. Electrolyte level too low.
- c. Impurities in electrolyte.
- d. Broken cell partitions.
- e. Electrolyte overfilled.
- f. Shorted or grounded wire.
- g. Unbalanced cells.
- h. Dirty or loose wire connections.

C2. Short battery life.

- a. Improperly adjusted or defective voltage regulator.
- b. Same causes as C1 above.

C3. Excessive loss of electrolyte.

- a. Poor servicing.
- b. Charging rate too high.
- c. Defective battery.

C4. Battery terminals corroded.

- a. Loose connections at battery terminal.
- b. Battery case (leaking electrolyte).

C5. Actuation of battery switch fails to turn on power.

- a. Battery relay defective.
- b. Faulty wiring between relay and battery switch.
- c. Faulty battery switch.

C6. Starter-generator produces voltage, but ammeter reads zero with gen switch in on position and N1 at engine idle speed.

- a. Defective ammeter.
- b. Defective circuit breakers in ammeter circuit.
- c. Broken or disconnected wire in ammeter circuit.
- d. Broken or defective generator shunt terminal.

C7. No generator voltage.

- a. At generator terminal
 - (1) Defective generator.
 - (2) Brushes excessively worn.
 - (3) Brushes binding in holders.

- b. On main DC bus.
 - (1) Defective generator switch.
 - (2) Defective line control relay.
 - (3) Defective generator shunt.
 - (4) Faulty voltage regulator.
 - (5) Faulty wire connections.
 - (6) Circuit breaker popped open.
- c. On non-essential bus.
 - (1) Defective NON-ESS BUS switch.
 - (2) Defective generator fail relay.
 - (3) Defective non-essential bus relay.
 - (4) Defective or popped GEN & BUS RESET circuit breaker.

C8. Generator voltage varies excessively with changes in engine speed or electrical load.

- a. Defective voltage regulator.
- b. Defective generator.

C9. Ammeter fluctuates rapidly under steady load conditions.

- a. Intermittent short or loose wire.
- b. Defective ammeter.

TM 55-1520-228-MTF

- c. One anti-collision light shorted, burned out, or drawing more amps than the other.

C10. Adjustment of voltage regulator does not move voltage within normal range.

- a. Defective voltage regulator.
- b. Incorrect or faulty wiring.
- c. Defective generator.

C11. Ammeter not zero with generator switch in off position.

- a. Defective GENERator switch, (generator not actually off).
- b. Defective line control relay.
- c. Defective ammeter.

C12. Inverter fails to produce voltage to AC bus, RBI and/or attitude indicator.

- a. INV PWR circuit breaker out.
- b. Defective inverter.
- c. Faulty INV switch.
- d. Faulty wiring or connection.
- e. Improper DC voltage input.
- f. Poor system grounding.

C13. Improper inverter output voltage or frequency rate (cycles).

- a. Low input DC voltage.
- b. High input DC voltage.
- c. Defective inverter.

C14. No ammeter indication when pitot heater turned on.

- a. Heater inoperative.
- b. Defective PITOT HTR breaker switch.
- c. Broken wire in system.

C15. Instrument or console lights fail to brighten or dim as INST LTS or CONSOLE LTS knob is rotated.

- a. Defective rheostat.
- b. Defective transistor dimmer element.

C16. Breaker switch or circuit breaker trips.

- a. Short in switch/breaker or wiring.
- b. Actual ampere overload on system.

C17. One caution or warning light is dimmer than the others.

- a. Poor grounding.
- b. Corroded lamp sockets or bulbs.

TM 55-1520-228-MTF

- C18.** Caution light(s) fail to burn with circuit energized normal or test position.
- Broken lamp filament.
 - Corroded lamp socket or bulb.
 - Broken wire.
- C19. Position lights malfunction when POSITION LTS switch is placed to BRIGHT position.**
- Defective circuit breaker.
 - Defective switch.
 - Shorted or defective wiring.
 - Lamp filament open (burned).
- C20. Position lights fail to burn or fail to go dim with POSITION LTS switch in DIM position.**
- All of item C19 above.
 - Defective dimming resistor.
- C21. Landing lights fail to light when LDG LTS switch is in FWD or BOTH position.**
- Circuit breaker faulty or out.
 - Defective landing light switch.
 - Lamp filament broken or burned.
 - Broken or loose wires.
 - Defective landing light relays.

C22. LDG LT PWR circuit breaker out when switch placed to on position.

- a. Defective switch.
- b. Shorted wire in circuit.
- c. Excessive ampere demand from lamp (due to incorrect lamp or loose wires).

C23. Blowers fail to operate when DEFOG&VENT switch is placed to the DEFOG & VENT position.

- a. Defective switch.
- b. Broken wire.
- c. Loose connections.
- d. Defective blower motors.

C24. DEFOG & VENT breaker switch trips to OFF.

- a. Shorted wire.
- b. Shorted or faulty blower motors.

C25. Lack of or no power when external power plug is connected.

- a. Power supply voltage from external source too low. (300-750 min/max amps.)
- b. External power relay inoperative.
- c. Dirty or corroded pins or plug at external power receptacle.
- d. Reversed polarity.

C26. External power relay is energized with reverse polarity voltage applied to external power receptacle.

- a. Defective one-way diode.
- b. Improper circuit wiring.

C27. Anti-collision light(s) burn constantly.

- a. Flasher is not properly grounded.
- b. Inoperative flasher.

C28. Anti-collision light(s) fail to illuminate.

- a. Broken wire or improper grounding.
- b. Dirty or corroded receptacle.
- c. Defective switch.
- d. Defective circuit breaker.
- e. Incorrect light bulb.
- f. Defective or improperly wired flasher unit.

C29. FUEL PUMP circuit breaker trips.

- a. Wiring shorted/defective relay.
- b. Shorted or defective pump.

C30. ENG DEICE circuit breaker trips to OFF.

- a. Shorted wiring.
- b. Faulty deice motor.

C31. Fuel boost pump fails to operate when FUEL PUMP circuit breaker is closed (in).

- a. Defective breaker in pump circuit.
- b. Faulty wiring or loose connections.
- c. Defective pump.
- d. FUEL BOOST switch in OFF position or defective.
- e. System voltage low.

C32. Engine quits during fuel boost pump check.

- a. Leak in fuel line causing cavitation.
- b. Improperly torqued fuel line inside of fuel cell.

**TROUBLESHOOTING GUIDE D - CAUTION PANEL
CONDITION**

PROBABLE CAUSE

D1. All or some caution lights dimly illuminated.

- a. Moisture in connector plug.
- b. Poor grounding of light.
- c. Caution panel malfunction.
- d. Low battery voltage.

D2. All caution lights out.

- a. Connector plug disconnected.
- b. Test switch defective.
- c. Broken wires.

D3. MASTER CAUTION light on only.

- a. Reset and check again.
- b. Wire grounded out (short).
- c. Small amount of ferrous resistance in one of the chip detector plugs.
- d. Loose wire connection.
- e. Caution panel malfunction.

D4. FUEL BOOST caution light on.

- a. Wire grounded out (short).
- b. See items C29 and C31.

D5. 20 MIN FUEL caution light on.

- a. Wire grounded out (short).
- b. Low fuel supply.
- c. Faulty caution panel.
- d. Low level switch defective.
- e. Defective wiring or connections.

D6. FUEL FILTER caution light on.

- a. Wire grounded out (short).
- b. Fuel filter is clogging and bypass is imminent.
- c. Caution panel malfunction.
- d. Faulty filter pressure switch (fuel).
- e. Faulty caution light.

D7. ENG OIL BYPASS caution light on.

- a. Wire grounded out (short).
- b. Defective float switch.
- c. Caution panel malfunction.
- d. **A** **A-720** See item B34.

TM 55-1520-228-MTF

D8. XMSN CHIP DET caution light on.

- a. Wire grounded out (short).
- b. Faulty wiring or caution panel.
- c. Internal failure of gears or bearings.
- d. Ferrous chips on plug.

D9. ENG CHIP DET caution light on.

- a. Wire grounded out (short).
- b. Faulty caution panel.
- c. Ferrous chips on plugs.

D10. T/R CHIP DET caution light on.

- a. Wire grounded out (short).
- b. See item F9.
- c. Faulty caution panel.

D11. INST INVERTER caution light on.

- a. Wire grounded out (short).
- b. Inverter inoperative.
- c. A/C fail relay inoperative.
- d. Faulty caution panel.
- e. See item C12.

D12. DC GENERATOR caution light on.

- a. Wire grounded out (short).
- b. Generator inoperative.
- c. See items C7 and D16
- d. Faulty caution panel.

D13. HYD PRESS caution light on.

- a. HYD BOOST SOL circuit breaker out.
- b. Hydraulic system turned off.
- c. Low hydraulic pressure because of low fluid.
- d. Pressure relief valve inoperative.
- e. Defective hydraulic pump.
- f. Solenoid valve not operating properly (stuck closed).
- g. Electrical wiring to warning light, solenoid valve, or pressure switch not correct.
- h. Faulty caution panel.
- i. Ruptured hydraulic line.

D14. DC GENERATOR caution light not on prior to engine start.

- a. Defective bulbs.
- b. Defective caution panel circuit.

- c. Broken or disconnected wire from generator fail relay.
- d. Faulty voltage regulator.

D16. All or any caution lights on dimly.

- a. Moisture in connector plugs.
- b. Shorted dimming circuit system.
- c. One bulb burned out.

D16. DC GENERATOR caution light is on after engine start with GEN switch in GEN position and N1 at idle speed or above.

- a. Ammeter indicates a load.
 - (1) Defective generator fail relay.
 - (2) Shorted wire.
- b. Ammeter indicates zero.
 - (1) Defective generator switch or breaker.
 - (2) Defective voltage regulator.
 - (3) Defective generator (output is lower than battery).
 - (4) Defective ammeter.
 - (5) Defective line control relay.

D17. IFF caution light on.

- a. Wire grounded out (short).
- b. Faulty caution panel.
- c. Unit not keyed or improper operation used.

D18. SPARE caution light on.

- a. Wire grounded out (short).
- b. Faulty caution panel.

TROUBLESHOOTING GUIDE E - POWER PLANT

CONDITION

PROBABLE CAUSE

E1. Throttle stiff.

- a. Flexible cable defective.
- b. Fuel control malfunction.
- c. Control rod binding or chaffing.
- d. Foreign object obstructing control movements.
- e. Fuel control shaft binding.

E2. Little or no fuel flow to engine driven fuel pump.

- a. No fuel in cell.
- b. Disconnected fuel line.
- c. Ruptured or broken fuel line.
- d. Defective fuel shutoff valve.
- e. Defective boost pump.
- f. Air in fuel lines.

E3. N1 below 62% with throttle at engine idle.

- a. Throttle linkage, bell crank, or support loose or broken.
- b. Incorrect gas producer fuel control lever setting.

- c. Gas producer fuel control idle adjustment incorrectly set.
- d. Tachometer malfunction.
- e. Air sensing lines leaking.
- f. Defective governor.
- g. Defective fuel control.
- h. Gen. load (off for check).

E4. N1 above 64% with throttle at engine idle.

- a. Incorrect gas producer fuel control lever setting.
- b. Gas producer fuel control idle adjustment incorrectly set.
- c. Defective fuel control.

E5. Fuel dripping from drain and weep holes.

- a. Fuel pump drive shaft seal leaking.
- b. Gas producer fuel control failure.
- c. Fuel nozzle stuck open.

E6. N2 instability above idle speed.

- a. Faulty double check valve.
- b. Air sensing tubes leaking.
- c. Faulty N2 governor.
- d. Faulty fuel control.

TM 55-1520-228-MTF

E7. Linear actuator fails to respond when GOV RPM switch is placed to INCR or DECR position.

- a. Defective or open circuit breaker in overhead console.
- b. Faulty wiring or loose connection.
- c. Switch contacts corroded or burned.
- d. Defective linear actuator.
- e. Leads connected to wrong terminals on actuator.
- f. Governor shaft binding.

E8. Linear actuator moves in opposite direction to increase or decrease selection.

Leads connected to wrong terminals on actuator or switch.

E9. Fluctuating TOT, N 1, N2, and torque gage.

- a. Faulty overspeed governor.
- b. Faulty fuel control.
- c. Engine deterioration.
- d. Pneumatic air leak.
- e. Faulty or dirty double check valve.
- f. Contaminated fuel.

E10. At full open throttle and full governor increase, N2 RPM not correct (not getting a 7% spread).

- a. Actuator needs adjustment.
- b. Governor stops being contacted.
- c. N1 or N2 fuel control malfunction.
- d. Droop compensator shear tube or control tubes bent.
- e. Engine not developing sufficient power.

E11. Governor RPM too high or low at full open throttle and decrease beep (must have **A 97%, **A-720 C** 94%).**

- a. Governor stops being contacted.
- b. Governor faulty or improperly rigged.
- c. Droop compensator improperly rigged.
- d. Shear tube weak.

E12. Excessive time for linear actuator to complete travel.

- a. Defective actuator.
- b. N2 governor binding.
- c. Control tubes restriction.

E13. No change in TOT when ENG DEICE switch is turned ENG DEICE or OFF (increase of 20 degrees will insure proper operation).

- a. ENG DEICE circuit breaker out or faulty.
- b. Faulty switch or wiring.
- c. Defective deice unit.
- d. Deice valve not properly rigged.

E14. Bleed valve is not opening or closing at proper N1 speed.

- a. Jet assembly has not been replaced for the check.
- b. Bleed air leaks.
- c. Calculation error.
- d. **A-720 C** Clogged filter.
- e. Faulty bleed valve unit.

E15. Compressor stall, fluctuating engine instrument, during start.

- a. Fifth stage bleed valve stuck closed.
- b. Dirty compressor.

E16. Compressor stall, fluctuating engine instruments, during acceleration.

- a. Compressor erosion.
- b. Bleed valve stuck closed.

- c. Defective gas producer fuel control.
- d. Faulty deice valve assembly.
- e. Dirty compressor.

E17. Engine slow to accelerate from engine idle to power.

- a. Loose pneumatic fittings.
- b. Dirty or eroded compressor.
- c. Defective fuel control or governor.
- d. Excessive compressor air leakage.

E-18. Low torque with high TOT.

- a. Faulty TOT indicator or system.
- b. Faulty torquemeter indicating system.
- c. Faulty FAT gage.
- d. Bleed air leaks.
- e. Restriction to compressor air inlet.
- f. Dirty compressor.
- g. Heater control valve leaking.
- h. Anti-icing valve leaking.
- i. Compressor FOD.
- j. Fifth stage bleed control valve has failed to close.
- k. Eroded compressor.

TM 55-1520-228-MTF

E19. Low TOT normal or high power.

- a. Faulty TOT indicator.
- b. Improperly adjusted resistor spool (8 ohms).
- c. Loose thermocouple wire terminal.
- d. Faulty TOT thermocouple assembly.
- e. Not actually developing power indicated. (N1 or torque system inoperative.)
- f. Improper hardware installed.

E20. Low TOT, low torque, N2 bleed-off (does not recover).

- a. Fuel control rigging.
- b. N2 governor rigging.
- c. Fuel control air line leakage.
- d. Pc filter.
- e. Fuel control max speed stop screw adjustment.
- f. Obstructed fuel flow, i.e. clogged filters, nozzle, or lines.
- g. Contaminated fuel.
- h. Faulty fuel control.
- i. Faulty governor.

TM 55-1520-228-MTF

E21. TOT normal, torque normal, N2 bleed-off 1-2% and stabilizes.

- a. Excessive bearing play in N2 governor linkage.
- b. Excessive bearing play in collective flight controls.

E22. Engine N1 overspeed above maximum limits.

- a. Faulty N1 tachometer.
- b. Faulty gas producer fuel control.
- c. Pilot induced.
- d. Auto acceleration. (Engine warm up time not complied with.)

E23. Engine N2 overspeeds.

- a. Faulty gas producer fuel control or power turbine governor.
- b. Faulty N2 tachometer or tachgenerator.

E24. Continuous exhaust smoking.

- a. Oil leakage in turbine section.
- b. Oil bellows seal faulty.
- c. Internal turbine seals faulty.
- d. Compressor front support bearing oil seal.

E25. Exhaust smoking on shut down or engine start.

Turbine rear bearing seal.

E26. Static oil leakage from drain valve.

- a. External oil check valve faulty or not installed properly.
- b. Turbine rear bearing sump nut.

E27. Number two engine bearing labyrinth seal venting oil vapor.

- a. Diffuser vent orifice loose.
- b. Diffuser vent orifice too large.
- c. Defective seal.

E28. Exhaust duct emitting sparks.

- a. FOD in engine.
- b. Turbine or compressor blade, vane, or seal damage.

E29. Excessive engine vibration.

- a. Bearing or accessories section, internal failure.
- b. Compressor or turbine damage.
- c. Loose engine mounts.

E30. Static oil leakage from power and accessory gear box breather.

- a. External oil check valve
- b. Internal check valve failure under the oil filter housing.

TM 55-1520-228-MTF

- E31. Excessive overshooting of RPM or hunting during collective application.**
- N1 or N2 governors inoperative faulty.
 - Improper rigging (droop).
- E32. No heated air from registers or abnormally loose switch (no stops).**
- Heater switch defective.
 - Temperature selection switch set at lower position.
 - Bleed air line not connected.
 - Defective solenoid on mixing valve or electrical wire not connected.
 - Remote sensor inoperative or control cable not connected.
 - Defective mixing valve.
- E33. Restricted warm air supply.**
- Leaks or obstruction in ducts.
 - Mixing valve malfunction.
 - Heater outlet valve incorrectly set.
- E34. Outlet temperature too high or too low.**
- Temperature selection incorrectly set.
 - Defective remote sensor or mixing valve.
 - Overtemp switch defective.

- E35. Torquemeter too high or too low at flat pitch A 103%, A-720 C 100% N2 RPM.**
- a. Improper initial pitch change links setting.
 - b. Torquemeter gage inoperative.
- E36. Engine oil consumption exceeds 6-1 /2 ounces per hour.**
- a. Leakage at a loose fitting or connection.
 - b. Restricted vent lines.
 - c. Defective internal engine oil seals.
- E37. Unable to move throttle to below engine idle.**
- a. Idle release button malfunction.
 - b. Throttle controls binding.
 - c. Throttle improperly rigged.
 - d. N1 fuel control malfunction.
 - e. Copilot's collective stick not properly installed.

**TROUBLESHOOTING GUIDE F - TRANSMISSION
CONDITION**

PROBABLE CAUSE

F1. XMSN OIL PRESS light on, with engine at operational RPM (62% N1).

2. Wire or XMSN transmitter is grounded out between transmitter and warning light.
- b. Low oil level.
- c. Faulty oil pump.
- d. Leakage or restriction between pressure relief valve and transmitter.
- e. Pressure relief valve malfunction.
- f. Defective transmitter.

F2. XMSN OIL PRESS light is not illuminated prior to engine start.

- a. Disconnected connector plug or broken wire from transmitter.
- b. Faulty light bulbs.
- c. Light bulbs not properly seated in socket.
- d. Corroded terminals.

F3. XMSN OIL HOT warning light on.

- a. Wires grounded out from transmitter to warning light.

- b. Shorted transmitter or indicator.
- c. Obstructed air flow into transmission oil cooler.
- d. Oil cooler clogged or obstructed.
- e. Oil cooler bypass valve malfunction.
- f. Clogged oil jets.
- g. Seized bearing or other internal transmission failure.
- h. Low oil quantity.

F4. Excessive pylon motion.

- a. Loose bearing on isolation mount fitting.
- b. Internal deterioration of isolation mount.
- c. Worn or loose pylon support link bearings.

F5. Oil leakage around freewheeling unit.

- a. Faulty seals or preformed packing.
- b. Faulty valve assembly.
- c. Hose leaking.
- d. Orifice fitting allowing excessive oil pressure to get to freewheeling assembly.

F6. Grease leakage at main driveshaft.

- a. Improper assembly.
- b. Cut or torn preformed packing.

TM 55-1520-228-MTF

- c. Cut or torn boot.

F7. Abnormal coupling wear of main driveshaft.

- a. Improper assembly.
- b. Incorrect or contaminated lubricant.

F8. Excessive loss of grease from hanger bearings.

- a. Improper assembly.
- b. Bearing misaligned within hanger clamp.
- c. Bearing overlubricated.

F9. Metal chips in tail rotor gear box. T/R CHIP DET caution light is on.

- a. Internal failure of gears or bearings.
- b. Submit oil sample.

F10. Autorotation RPM too high or too low.

- a. Blade angle set incorrectly.
- b. Gross weight different than computed.

TROUBLESHOOTING GUIDE G – HYDRAULIC

CONDITION

PROBABLE CAUSE

G1. Excessive feedback in flight or during power cylinder check, hydraulic boost on.

- a. Feedback in collective and cyclic.
 - (1) Air in system.
 - (2) Excessive out-of-track or out-of-balance rotor system.
 - (3) Low pump pressure.
 - (4) Main pressure relief valve inoperative.
- b. Feed back felt in one flight control.
 - (1) Loose servo assembly or attaching bolts.
 - (2) Excessively worn rod end bearings.
 - (3) Defective servo.

G2. HYD BOOST switch ineffective.

- a. HYD BOOST SOL circuit breaker popped or faulty.
- b. Faulty switch.
- c. Faulty connections or wiring.
- d. Faulty solenoid valve.

TM 55-1520-228-MTF

- e. No hydraulic pressure.
- f. Electrical failure.

G3. Flight controls do not operate smoothly.

- a. Sticking servo control valve.
- b. Pivot bolts in input lever are sticking or over torqued.
- c. Low pump pressure.
- d. Air in system.
- e. Pump one-way check valve improperly installed.

G4. Servo actuators chatter when moving controls.

- a. Air in servo actuators.
- b. Low hydraulic pressure.
- c. Loose servo assembly or attaching bolts.
- d. Excessively worn rod end bearings.

G5. Excessive feedback with HYD BOOST switch OFF.

- a. Excessive out-of-track or out-of-balance of rotor system.
- b. Irreversible valve malfunction.
- c. Air in irreversible chamber.
- d. Pilot valve malfunction.

- G6. During power cylinder check, feedback is felt in cyclic stick.**
- a. Servo pilot valve malfunction.
 - b. Defective servo.
 - c. Pump malfunction.
- G7. Cyclic jams during rapid movement.**
- a. Defective servo.
 - b. Low hydraulic pressure or fluid level.
 - c. FOD in flight controls, flight controls binding.
- G8. Collective motors up or down, HYD BOOST switch ON.**
- a. Pilot valve bolts too tight.
 - b. Defective servo.
- G9. Hydraulic system too hot. (The HYD PRESS caution light may illuminate.)**
- a. Relief valve inoperative, cracking pressure starts too low.
 - b. Low fluid level.
 - c. Hydraulic filters are clogged or starting to clog.
 - d. One-way check valve installed wrong.

G10. Unable to get collective up sufficiently (boost on).

- a. Defective servo.
- b. Improper rigging or controls jammed.

TROUBLESHOOTING GUIDE H - FLIGHTCONTROLS

CONDITION

PROBABLE CAUSE

H1. Cyclic binding in certain areas with force trim off.

- a. Wiring harness binding at base of cyclic stick.
- b. Foreign matter in base of stick.
- c. Foreign matter under deck.
- d. Rough spot in friction device.
- e. Rod end bearings worn or dirty.

H2. With FORCE TRIM switch OFF, cyclic continues moving after small forces applied or moves without cyclic input.

- a. Moves forward or aft only.
 - (1) Cyclic centering spring improperly adjusted.
 - (2) Improperly rigged force trim.
- b. Moves mostly in a 45 degree angle.
 - (1) Servo cylinder control head bolts too tight.
 - (2) Defective servo.
- c. Moves with less than 0.5 pounds of force - friction improperly adjusted.

H3. Pedals binding.

- a. Foreign matter binding forward controls under center console.
- b. Rod end bearing malfunction.
- c. Control tube binding on phenolic block in tailboom.
- d. Excessive friction applied on T/R pedal friction device.

H4. Excessive play in pedals.

- a. Worn pitch change mechanism.
- b. Worn tube rod end bearings or pedal adjustor assembly.

H5. Unable to increase collective friction using pilot adjustable friction device.

- a. Friction knob jammed.
- b. Threads need cleaning.
- c. Malfunction in jackshaft friction.

H6. Collective built-in friction too light or too heavy.

- a. Friction nut or clamp at jackshaft not adjusted properly.
- b. Binding of N2 system.

H7. Collective stick binds and sticks or has breakaway force.

- a. Friction device worn, rough, or improperly adjusted.

- b. Electrical wire harness at base of collective fouling.
- c. Obstruction of push-pull tubes from collective to swashplate.
- d. N2 governor or control binding.
- e. N2, droop compensator, or shear shaft tube binding. Check rod ends.
- f. Defective servo.

H8. Any magnetic brake fails to energize with FORCE TRIM switch in the FORCE TRIM position.

- a. Defective magnetic brake.
- b. Copilot's cyclic stick connector plug must be connected even with stick in stored position.

H9. Magnetic brake fails to reenergize when force trim switches are depressed.

- a. Defective switch.
- b. Wiring is shorted out, grounded.

H10. Force trim weak or allows play in cyclic.

- a. Improper built-in spring tension adjustment.
- b. Improper rigging.
- c. Magnetic brake inoperative.
- d. Wrong gradient spring assembly installed.

TM 55-1520-228-MTF

- e. CAP NUT with double safety wire is not properly adjusted.

H11. Force trim stiff.

- a. Wrong gradient spring installed.
- b. Spring tension out of adjustment.

H12. Excessive friction on cyclic with force trim released.

- a. Adjustable friction not completely off.
- b. Foreign matter in base of stick.
- c. Magnetic brake unit stiff (dragging).

H13. Force trim holds in same position with FORCE TRIM switch in the OFF position.

- a. Faulty magnetic brake binding.
- b. Faulty wiring at switches.
- c. Improperly rigged.

H14. Force trim inoperative.

- a. Faulty switches.
- b. Open circuit breaker.
- c. Open or shorted wire.
- d. Faulty magnetic brake.
- e. No electrical power going to magnetic brake (ensure copilot cyclic connector plug is connected).

H15. Unable to get normal cyclic travel.

- a. Improper rigging of cyclic or collective.
- b. Control components improperly installed.
- c. Force trim rigged improperly.

H16. Cyclic position abnormal for flight condition.

- a. Cyclic rigged improperly.
- b. C.G. not as computed.

H17. Rotor response to cyclic inputs slow or inconsistent.

- a. Cyclic rigged improperly.
- b. Servo leaking.
- c. Faulty hydraulic pump.
- d. Faulty pressure relief valve.

H18. Cyclic stick not centered in stable hover.

- a. Fore and aft C.G. not within limits.
- b. Lateral C.G. not within limits.
- c. Cyclic rigged improperly.
- d. Swashplate rigged improperly.

H19. Pedal creep.

- a. Dynamic balance.

b. Washer stackup incorrect (see TM 55-1520-228-23).

c. Aircraft not into wind.

H20. Unable to obtain a minimum of A 76 psi, A-720 C 83% up and/or + 16 psi, A-720 17% down during collective (hyd boost off) check.

a. Defective tension torsion straps.

b. Collective binding.

c. Faulty torque system.

d. Maximum power reached prior to 76 psi up.

H21. C VRFC rough or binding.

a. Control cables have sharp or compound bends.

b. Rough or seizing bearings in idler bellcrank or in swivels at shear link terminals.

H22. C Excessive freeplay or looseness in VRFC.

a. Loose idler bellcrank attachment.

b. Worn rod end bearing.

c. Shear link terminals are loose or have play.

d. Shear link terminal rod ends have play.

H23. C VRFC system inoperative.

a. Broken shear pins or shear link terminals.

b. Electro-mechanical disconnects inoperative.

TM 55-1520-228-MTF

TROUBLESHOOTING GUIDE I - NOT APPLICABLE

TROUBLESHOOTING GUIDE J - VIBRATIONS

CONDITION

PROBABLE CAUSE

NOTE

See Section IV, paragraph C for detailed information on vibrations.

J1. Extreme low frequency vibration (approximately 2 to 3 beats per second).

- a. Loose or faulty isolation mount or bearing.
- b. Severe maneuvers, i.e. relatively long ground runs with collective up during practice auto-rotations.
- c. Extreme asymmetric (lateral) loading.
- d. Low g maneuvers.
- e. Low rotor RPM.

J2. Low frequency vibrations.

NOTE

Low frequency vibrations are divided into two groups, laterals and verticals.

- a. Laterals.
 - (1) Spanwise.
 - (a) Blades of unequal weight.

- (b) Blades of unequal flight time.
 - (c) Blades from different environments.
 - (d) Moisture in blades.
 - (e) Improper filling or repair techniques.
 - (f) Improper balancing techniques.
 - (g) Trunnion not centered.
- (2) Chordwise.
- (a) Blades of unequal flight time.
 - (b) Improper balancing techniques.
 - (c) Improper alignment (sweep).
 - (d) Excessive movement (2 flats) on pitch change control tubes.

b. Verticals.

- (1) 1/REV (5 to 6 cycles per second. e.g. 354 rpm/60 sec = 5.9 CPS).
- (a) Excessively worn parts.
 - (b) Climbing (weak) blade.
 - (c) Weak trim tabs.
 - (d) Improper smoothing procedures.
 - (e) Damaged blades.

TM 55-1520-228-MTF

- (2) 2/REV (10 to 12 cycles per second).
- (a) Insufficient friction on swashplate uniball.
 - (b) Excessively loose control linkage or swashplate parts.
 - (c) Deteriorated or separated pylon isolation mount; worn transmission to isolation mount attachment bolt or bearing.
 - (d) Excessive degree of trim tab on one or both blades.
 - (e) Loose blade latch bolt or nut.

J3. Medium frequency vibration felt in airframe. (20 to 25 cycles per second)

- a. Skids or crosstube loose.
- b. Unstowed equipment.
- c. Horizontal stabilizer attachment bolts loose.
- d. Vertical fin attachment bolts loose.
- e. Any loose airframe components.
- f. Airframe skin is oil canning,

J4. High frequency vibration.

- a. Tail rotor hub assembly unbalanced.
- b. Worn or loose blade bearing.
- c. Loose or shifted trunnion.

TM 55-1520-228-MTF

- d. Loose or worn pitch change link bearing.
- e. Bent pitch change link.
- f. Loose retaining nut.
- g. Loose or worn pitch change slider.
- h. Worn tail rotor bumper.
- i. Tail rotor gear box alignment or failure.
- j. Retaining bolts of tail rotor gear box loose.
- k. Loose bolts in flexible couplings.
 - i. Worn splined adapters.
- m. Tail rotor driveshaft bent.
- n. Shaft hanger bearing rough or failed.
- o. Loose hanger bearing housing.
- p. Oil cooler fan unbalance or failure.
- q. Engine malfunction.
 - r. Generator bearing failure.
 - s. Freewheeling unit failure.
 - t. Engine oil pump failure.
- u. Loose engine mounts.
- v. Main drive shaft failure.
- w. Main transmission malfunction.

- x. Hydraulic pump failure.
- y. Transmission oil pump failure.
- z. Attitude indicator or turn and slip indicator's gyroscope malfunction.

J5. Excessive torsional oscillation.

- a. Double check valve dirty or inoperative.
- b. Air leak in system.
- c. Faulty power turbine governor.
- d. Faulty fuel control.

**TROUBLESHOOTING GUIDE K -
COMMUNICATION/NAVIGATION EQUIPMENT**

CONDITION

PROBABLE CAUSE

K1. Radios inoperative.

- a. Circuit breaker out.
- b. Headset not plugged in completely.
- c. Radios improperly tuned.
- d. ICS panel malfunction.
- e. Connector plug disconnected or broken.
- f. Radio malfunction.
- g. Antenna wire disconnected or crossed.
- h. Fuse blown.

K2. ICS panel malfunction.

- a. ICS panel inoperative.
- b. ICS panel disconnected.
- c. Headset not plugged in completely.
- d. Circuit breaker out.

K3. #1 FM radio inoperative.

- a. KY-58 dummy plugs not installed.

- b. KY-58 not turned on.

K4. ADF malfunction.

- a. ADF inoperative.
- b. NDB station inoperative.
- c. Loop antenna inoperative.
- d. ADF set not connected.
- e. Antennas disconnected.

K5. KY-28 and T/SEC 1/A malfunction.

- a. Sets are zeroized.
- b. Codes not set correctly.
- c. Mode position switch incorrectly set.
- d. ARC-114 slave cards are old series.
- e. Sets not connected properly.
- f. Circuit breaker out.

**TROUBLESHOOTING GUIDE L - AIR-TO-AIR STINGER
(ATAS) MISSILE SYSTEM **CS****

CONDITION

PROBABLE CAUSE

L1. Target acquisition reticle and missile status symbology does not display within 20 seconds.

- a. Defective or open circuit breaker.
- b. Defective electronics unit (EU).
- c. Defective ATAS control panel (ACP).
- d. Defective pilot display unit (PDU).
- e. Defective wiring.
- f. Defective relay 21K1.

L2. Display does not change when PDU TEST switch is pressed.

- a. Defective EU.
- b. Defective PDU.
- c. Defective wiring.

L3. Acquisition reticle is displayed, but brightness control will not adjust reticle brightness.

Defective PDU.

L4. ARM message not displayed with MASTER switch set to ARM.

- a. Defective ACP.
- b. Defective EU.

TM 55-1520-228-MTF

- c. Defective interface electronics assembly (IEA).
 - d. Defective wiring.
- L5. Gyro spinup tone not activated and/or missile not shown selected on PDU with UNCAGE switch set to AUTO and MSL ACT switch pressed.**
- a. Defective IEA.
 - b. Defective ACP.
 - c. Defective switch/grip.
 - d. Defective wiring.
- L6. Tracking reticle does not replace acquisition reticle with TRIGGER UNCAGE/FIRE switch pressed to first detent.**
- a. Defective IEA.
 - b. Defective ACP.
 - c. Defective switch/grip.
 - d. Defective wiring.
- L7. Audio tone does not change to high pitched steady tone indicating IR source lock-on.**
- a. Defective ACP.
 - b. Defective IEA.
 - c. Defective wiring.
 - d. Defective transformer 2ITI.

- L8. Seeker uncages, but does not track target correctly or at all.**
- a. Weapon system improperly boresighted.
 - b. Defective missile.
 - c. Defective IEA.
 - d. Defective EU.
 - e. Defective wiring.
 - f. Alternate heat source.
 - g. High free air temperature (FAT).
- L9. Missile symbol does not disappear to verify firing of selected missile when TRIGGER UNCAGE/FIRE switch is pressed to second detent.**
- a. Defective switch/grip.
 - b. Defective IEA.
 - c. Defective wiring.
- L10. Remaining missile not selected after TRIGGER UNCAGE/FIRE switch is released.**
- a. Defective missile.
 - b. Defective launcher.
 - c. Defective IEA.
- L11. Acquisition reticle not displayed after TRIGGER UNCAGE/FIRE switch is released.**
- Defective switch/grip.

L12. System does not recycle after CFT RST button is pressed and released.

Defective ACP.

L13. SEQ STEP switch does not select (activate) next available missile when a missile is activated and SEQ STEP is pressed and released.

NOTE

Two missiles must be present for this function to operate. A previously deselected missile will not reselect.

- a. Defective ACP.
- b. Defective IEA.
- c. Defective wiring.

SECTION IV - SPECIAL PROCEDURES

General. This section contains special procedure which were referenced in Section II.

A. **C**ALTIMETER, RADAR, AN/APN - 209, SELF-TEST.

Test Step	Test Instruction	Normal Indications
1.	Set low altitude warning bug to 50 feet, and the high altitude warning bug to 800 feet.	<ul style="list-style-type: none"> a. OFF flag-not in view b. Altitude pointer -0 +/- 5 feet c. Digital readout -0 to 3 feet d. LO warning light ON e. HI warning light OFF
2.	HI SET knob - Press and Hold	<ul style="list-style-type: none"> a. Altitude pointer -1000 + 175 feet b. Digital readout 1000 +/- 100 feet c. LO warning light OFF d. HI warning light ON
3.	HI SET knob - Release	Indications should return to those noted in step 1.

B. RADAR WARNING RECEIVER, AN/APR-39, SELF-TEST.

Test Step	Test Instruction	Normal Indications
1.	Apply power to AN/APR-39. Wait one minute for warm up.	Control unit panel lamps illuminate.
2.	Set control unit DSCRM - OFF. Monitor CRT and audio, press and hold SELF TEST.	<p>a. Fwd and aft (12:00-6:00) strobes appear, extending to approx. the third circle on the CRT. A 2.5 kHz PRF audio should be heard immediately.</p> <p>b. Within 6 seconds alarm audio present and MA lamp starts flashing.</p>
3.	Rotate indicator BRIL control CW and CCW.	Indicator strobes should brighten and dim.
4.	Rotate control unit AUDIO CW and CCW.	Audio not audible at max CCW and clearly audible at max CW.
5.	Release SELF TEST.	All indications cease.

TM 55-1520-228-MTF

Test Step	Test Instruction	Normal Indications
6.	Set DSCRM to ON. Press and hold SELF TEST.	<ul style="list-style-type: none">a. Within 4 seconds a fwd or aft strobe (either may appear first) and 1.2 kHz PRF audio present.b. Within 6 seconds the other strobe will appear and PRF audio frequency will double.c. Several seconds later missile alarm audio present and MA lamp starts flashing.
7.	Release SELF TEST.	All indications cease.

C. VIBRATION ANALYSIS.

NOTE

Step-by-step procedures for solving vibration problems are shown in Section IV, paragraphs D through M. Troubleshooting is shown in Section III, paragraph J.

NOTE

Vibrations as a whole may be identified by category based on their magnitude.

1. Extreme Low Frequency Vibrations.

The extreme low frequency vibration occurs at 2 to 3 beats per second and is confined to the pylon area of the helicopter. When severe enough, this vibration is known as spike knock. The vibration may be induced by a test pilot using a slight fore and aft movement of the cyclic (2" to 3"). Once the movement is made, the cyclic should be centered. At this time the test pilot can count the number of cycles it takes for the vibration to dampen out. Dampening should be completed in 3 to 5 cycles. Even though fore and aft movement is made on the cyclic, the pylon will rock laterally.

2. Low Frequency Vibration.

NOTE

Low frequency vibrations are divided into two groups: laterals and verticals. All lateral vibrations must be eliminated before a vertical vibration can be eliminated because a lateral will manifest itself as a vertical in forward flight. Lateral vibrations are "RPM" sensitive.

a. Lateral. Lateral vibrations are caused by an out of balance condition, either spanwise or chordwise.

(1) Spanwise. A spanwise imbalance is due to a weight difference in the spanwise axis of the blades.

(2) Chordwise. A chordwise imbalance condition is caused by the center of gravity of one blade not being compatible with the other blade.

NOTE

Vertical vibrations are divided into two categories: 1/rev (5 to 6 cycles per second) and 2/rev (10 to 12 cycles per second), e.g.,
 $1/\text{rev} = 354 / 60 = 5.9 \text{ CPS}$
 $2/\text{rev} = 5.9 \times 2 = 11.8 \text{ CPS}$.

b. Vertical. Vertical vibrations are caused by one blade developing more lift at a given pitch setting than the other blade develops at the same point.

(1) 1/rev vibration.

(2) 2/rev vibration. The OH-58A/C, as any other two-bladed rotor system, has a certain amount of Z/rev vibration that is inherent in the aircraft; thus, we are interested in removing that amount which would be considered excessive. Not only is an excessive amount uncomfortable, but it increases the wear on the components thereby causing them to fail prematurely. Since this vibration occurs at 10-12 CPS, it would be unrealistic to think that you could count the cycles per second.

3. Medium Frequency Vibration.

A medium frequency vibration occurs at 20-25 cycles per second and is another inherent vibration associated with most helicopters. An increase in the level of these vibrations is caused by a change in the capability of the fuselage to absorb vibrations or a loose airframe component, such as skids vibrating at that frequency. Changes in the fuselage vibration absorption can be caused by such things as fuel level, external stores, structural damage and repairs, internal loading, or gross weight. Abnormal vibration levels of this range are almost always caused by something loose, either a part of the helicopter, a part of the cargo, or external stores.

4. High Frequency Vibration.

Since a high frequency vibration can be caused by anything that rotates or vibrates at tail rotor speed or faster, this includes many unusual situations such as hydraulic lines buzzing or starter relay buzzing, to the most common and obvious cause - tail rotor out of balance.

D. TRACK AND BALANCE PROCEDURES.

NOTE

This section has instructions for only the strobe-type tracking device. If manual methods are to be used, consult the appropriate airframe maintenance manual.

1. General:

a. The semi-rigid rotor system of the OH-58A/C allows balancing of both main and tail rotors to be accomplished on the ground, so rigging should be done at the same time. Readings may then be taken on the same ground run of the ship, saving time and engine starts.

b. Rotors are balanced, based on ground runs only. After balancing, the helicopter is flown and the main rotor is tracked. Based on visual in-flight tracking observations, the determination is made as to whether to make track adjustments with trim-tab or pitch-link. Final adjustment is made using vertical one-per-rev "IPS" and "Clock Angle" vibration measurements (from an Accelerometer on the console).

c. Detailed instructions for particular helicopter types will be found in the "Checklist" booklet and on the "Balance Charts" for the model in question.

d. Install the tracking and balancing hardware on the aircraft as prescribed in the maintenance manual.

2. Pre-run Checks.

a. Zero Trim Tabs (trail position).

b. Pitch change links should be set to nominal setting.

c. Check Main Rotor Trunnion Centering.

d. Check balance weights in main rotor hub (should not have weight in both blade pins).

e. Insure aircraft is into the wind.

3. Take Tail Rotor Balance Readings.

a. Run aircraft at **A** 103%, **A-720** **C** 100%.

b. Switch Balancer "Function" switch to appropriate Channel and adjust Balancer to tail rotor rate of 2550 RPM ("RPM Tune" dial to 255 and "RPM Range" switch to "x 10").

c. Set Strobex (135M-11) "Mode" switch to position "A," deactivating the oscillator.

d. Direct Strobex at tail rotor disc and observe the "Clock Angle" of the retro-reflective target on the grip. The observer must hold the light as near as possible in front of his eyes to see the target brightly.

e. Press "Verify Tune" button, and adjust "RPM Tune" dial, WHILE BUTTON IS PUSHED, to return target to angle observed BEFORE button was pushed. Release button, observe angle, push button and adjust "RPM Tune" dial again to match new "UNPUSHED" angle. Repeat until there is NO CHARGE whether button is

TM 55-1520-228-MTF

pushed or released. ADJUST "RPM TUNE" DIAL ONLY WHILE BUTTON IS PUSHED.

f. Read "Clock Angle" with button released, and "IPS" WITHOUT STROBEX FLASHING. Record in Section A of tail rotor Balance Chart #3438 (Figure 5-1).

NOTE

If reading is off scale, press "Scale 2" button and read second scale. If Tail rotor balance is good (less than 0.2 IPS), proceed to paragraph 4, check Main Rotor Track. If not, shut down and adjust balance.

4. Check Main Rotor Track.

a. Switch Balancer "Function" switch to "Track".

b. Switch Strobex (135M-11) as follows:

(1) "Mode" switch to "A", in which case oscillator is inoperative and setting of the "RPM" dial has no effect and is unimportant. Targets will be seen at about 12:00 or 1:00 o'clock. Light is in low intensity mode.

OR

(2) "Mode" switch to "B" and "RPM" dial to about 200. This allows viewing of targets at about 12:00 and 6:00 o'clock. Setting "RPM" dial to about 566 allows viewing at 12:00, 3:00, 6:00, and 9:00 o'clock for viewing advancing and retreating blades. Light is in high intensity mode.

c. From near the cabin, direct the Strobex Tracker to the blade tip path at the front of the helicopter. Sweep up and down and in azimuth in a "W" pattern to find the Tip Targets. Observe and note the track on the main rotor Balance Chart #3411 (Figure 5-2).

NOTE

Pull enough pitch to avoid ground bounce.

d. Perfect track is evidenced by a cross and the vertical relation of the horizontal bar to the vertical bar indicates the obvious.

(1) If one Target appears too far to the right or left of the other (more than a couple of inches), note which one is which direction. Shut the helicopter down and bend the vertical fin of the single Interrupter in the direction necessary to align Targets. Bending the Interrupter tab 0.10" inch will move the Target about 3 inches, so it doesn't take much

(2) All ground run track adjustments should be made with pitch-link only. Do not work tabs until after in-flight observations.

(3) If initial track adjustments much be large, (1 inch or so) it is often best to turn a rod-end rather than the pitch-link barrel. Barrel adjustments are slow.

5. Check Main Rotor Balance.

NOTE

If track looks okay, keep helicopter running and proceed as follows. If not, shut down and adjust.

NOTE

Main rotor balance cannot be accomplished unless rotor is in good ground track.

a. Run suppletory at **A** 103%, **A-720** **C** 100% fiat pitch; center controls so nose of the helicopter is into the wind.

TM 55-1520-228-MTF

NOTE

Pull enough pitch to avoid any "ground bounce" that may occur.

b. Switch Balancer "Function" switch to appropriate Channel (Main rotor), "Interrupter Logic" switch to "Double" and "Magnetic Pickup" switch to "Common".

c. Set Balancer to 354 RPM ("RPM Range" to "1" and "RPM Tune" dial to 354).

d. Press "Test" button and check that the 12:00 and 6:00 o'clock lights are illuminated in the Phazor's ring of lights. This display must be seen before proceeding. If this pattern is not seen, check the double and single Interrupters on the helicopter, the Balancer settings, and the Magnetic Pickup gap.

e. Release "Test" button and observe "Clock Angle" of illuminated light in the ring of lights.

f. Push "Verify Tune" button, and adjust "RPM Tune" dial WHILE BUTTON IS PUSHED, to return light to angle observed BEFORE button was pushed. Release, observed angle, push and adjust again to match new UNPUSHED angle. Repeat until there is no change whether button is pushed or released. TUNE ONLY WITH BUTTON PUSHED.

g. Read "Clock Angle" and "IPS", with button released and record in Data Section of main rotor Balance Chart #3411 (Figure 5-2).

h. Shut down and adjust balance if required.

CAUTION

Maximum aft movement must not exceed 3 points of the latch bolt nuts when sweeping the main rotor blades. Adjustments must be recorded on the main rotor hub DA form 2408-16.

6. Balance Adjustments.

a. Plot a point at the intersection of the clock angle line and "IPS" circle on the Balance Charts (main and tail rotors). Make the indicated changes to main and tail rotors.

NOTE

Make one change only for the first move on the main rotor (either sweep or blade bolt weight). Check that the "Move Line" is in the correct direction. If it is, proceed to balance. If not, use Clock Angle Corrector #3597 and correct clock angle.

b. Run helicopter again, repeat readings, and record in Data Section of Balance Chart.

c. Repeat until "IPS" readings are 0.2 or less.

NOTE

It is important to understand that the purpose of balancing is to reduce the vibration level (IPS) to the lowest level possible, or to the center of the Chart. (0.2 or better is considered good.) Clock Angle is totally unimportant in the final result and only tells where to put the weight during the balancing. In fact, as good balance is achieved, the Clock Angle becomes jittery and uncertain. A very erratic Clock Angle (and low "IPS" reading) is an excellent indication that balance is "perfect".

TM 55-1520-228-MTF

7. Prepare Aircraft For In-flight Checks.

a. Remove Accelerometer and Cable from tail rotor area.

b. Place instruments in cabin within easy reach of co-pilot seat bringing the main rotor Magnetic Pickup and Accelerometer Cables in the left-rear door. Close door on Cables, pulling exposed section tight. Remove DC Extension Cable and plug Balancer directly into DC receptacle in overhead panel.

c. Check that both main rotor Cables (Magnetic Pickup and Accelerometer) are dressed safely for flight.

d. Secure an Accelerometer (from tail rotor) to the console, or forward part of the airframe, under a convenient screw-head. It must be attached to a rigid part of the structure and its CONNECTOR MUST POINT DOWN. Use Bracket #3382. Plug this Accelerometer into the appropriate channel.

8. In-flight Main Rotor Tracking.

a. Switch Balancer "Function" switch to "Track". (Everything else the same.)

b. 135M/11 Strobex maybe used in position "A" or "B" depending on light intensity desired.

c. Now, fly the helicopter and sketch, in the space provided on Tracking Chart, the track observed at 60 and 100 knots. (Do not exceed a reasonable airspeed for the conditions of track density/altitude, load, etc.).

d. Then, at each of the above airspeeds, switch Balancer "Function" switch to insert appropriate channel (vertical Accelerometer). Press "Test" button and look for 12:00 and 6:00 o'clock lights.

TM 55-1520-228-MTF

e. Release "Test" button and observe "Clock Angle" of lighted light in ring of lights.

f. Push "Verify Tune" button, and adjust "RPM Tune" dial WHILE BUTTON IS PUSHED, to return light to angle observed BEFORE button was pushed. Release, observe angle, push and adjust again to match new "unpushed" angle. Repeat until there is NO CHANGE whether button is pushed in or released. After tuning, record "Clock Angle" and "IPS" at 100 knots, in the spaces provided on in-flight Tracking Chart #3875 (Figure 5-3).

g. Land the helicopter and plot the 100 knot (or highest speed reached) reading on Tracking Chart, at the intersection of "Clock Angle" line and "IPS" circle. Label it point #1.

IMPORTANT

TRACK changes can affect Balance. Check and record balance readings prior to each flight, in space provided. Correct balance as required.

9. General Rules For Correcting In-flight Main Rotor Track.

a. If the blades are seen to spread as airspeed is increased (the Tip Targets show substantially more vertical separation at 100 knots than at 60) use trim-tab. If the blades are out of track about the same amount at all airspeeds, use pitch-link.

b. 60 knots 100 knots

	+	+ This calls for TAB Change
Visual track		
with airspeed	+	+ This calls for PITCH-LINK Change.

NOTE

Another rule of thumb is to use only pitch link for adjustment of low speed track and then to continue to use pitch link for high speed track until it adversely effects any other flight mode.

CAUTION

Maximum trim tab deflection is 7 degrees up or down.

c. Use as little tab as possible. Excessive tab tends to wash out, and may deteriorate the ride in let-down or other conditions of loading (gross weight, etc.).

d. Fly the helicopter again and check results. Repeat if required to reduce readings (vertical one-per-rev) to 0.2 "IPS" or less. Check all airspeeds.

e. Trim tab and pitch link changes generate a "Move Line" in approximately the same direction. Tab is much more airspeed sensitive, but the direction is about the same.

f. THERE IS NO CONTROL THAT WILL RELIABLY CAUSE THE "MOVE LINE" TO GO PERPENDICULAR TO THIS. An exception might be worn or loose control linkage (pitch link rod ends, etc) which seem to have this effect to some extent.

g. If this "Move Line" does not go through the center of the Chart, but rather goes tangent to some "IPS" circle (i.e., 0.3 "IPS"), that is the lowest vertical vibration level attainable. If that level is not acceptable, it

suggests that the mismatch of blades is such that they cannot be made to fly together satisfactorily. Of course, all remedies should be exhausted before this conclusion is reached, but failure of the "Move Line" to go through the center of the clock is a strong indication of mismatch.

10. Two-Per-Rev.

a. Vertical two-per-rev can also be measured from the accelerometer mounted vertically on the console. Simply set the "RPM Tune" dial to 708, and "Range" switch to "X1".

(1) The vertical two-per-rev is unaffected by track or balance.

(2) Above 100 or 110 knots, the vertical two-per-rev gets rather heavy.

(3) Vertical two-per-rev varies greatly from helicopter to helicopter.

(4) The two-per-rev becomes more noticeable as 1/REV is eliminated.

b. It is well recognized that a low frequency masks the feel of a high frequency vibration.

c. The following table is a tabulation of one- and two-per-rev readings. A considerable variation from these figures can be expected, especially at higher airspeeds, since these numbers are the average of readings from more than a dozen OH-58s.

TM 56-1620-228-MTF

ONE- AND TWO-PER-REV READINGS

AIRSPEED - KNOTS

	60	80	90	100
1/rev	.3 /	.5 /	.7 /	.8 /
	.1	.1	.15	.15
2/rev	.15 /	.45 /	.7 /	.95 /
	.15	.45	.7	.95
OBSERVED TRACK	+	+	-	-
	+	+	+	+
TAB TO CORRECT	4°			

d. Two-per-rev work is largely "Black Magic", but it is effected by:

- (1) Swashplate uniball tightness.
- (2) "A" frame uniball tightness (or looseness).
- (3) Landing gear cross-tube.

11. Troubleshooting With Free Probe Accelerometer.

a. If, after balancing and tracking both rotors, other vibrations are felt, the VIBREX 4591 System may be used for troubleshooting.

b. The source of other vibrations may be determined by securing an Accelerometer in the area of noticed disturbance. Then, by tuning the "RPM Tune" dial through the range of interest until the "IPS" meter

TM 55-1520-228-MTF

peaks, the RPM (frequency) of the disturbance can usually be determined. (Do the final peaking of the meter with the "Verify Tune" button pushed.) This is generally the same as, or harmonically related to, the source (forcing function) of the vibration.

c. The Accelerometer can often be "hand-held" with good results while "searching" with the "RPM Tune" dial. Use care to select "hard points" where the vibration will not be dampened (suppressed). Avoid sheet metal panels, etc.

d. To facilitate determination of the offending component, the following operating RPMs are printed. Components of the different models may turn at different RPMs than those shown here. Refer to the helicopter manual for your particular model.

NOTE

All Operating RPM's are for both the OH-58A and OH-58C with the exception of the N2 turbine wheel.

Assembly	RPM
Main rotor	354
Main rotor two-per-rev	708
Main rotor six-per-rev	2124
Tail rotor	2623
Tail rotor two-per-rev	5246
Tail rotor drive-shaft	6173
Oil cooler fan (xmsn)	6173
Engine to xmsn shaft	6173
Oil pump transmission	4344
Hydraulic pump	4344
Tachometer generator (transmission)	4344

TM 55-1520-228-MTF

Assembly		RPM
Sungear (transmission)		1648
Planetary (transmission)		
N2 turbine wheel	36010, A-720 C	34158
Torque meter shaft pad		10288
Power turbine governor pad		4309
N2 turbine pinion		6173
N2 tachometer generator		4309

e. The VIBREX Tester, model 11, provides a complete and simple functional test and calibration of the entire VIBREX 4591 System. Use of the Tester will identify most problems that are likely to occur with the VIBREX.

E. FUEL CONTROL MAX SPEED STOP.

Refer to A TM 55-2840-231-23 or A-720 C TM 55-2840-241-23.

F. BASELINE HIT.

1. Establish new Hit baseline TOT valves. New baseline values for HIT will be established when an engine has been replaced or when the airflow of an engine has been affected by any maintenance performed. Examples include:

- (A) Replacement or repair of the compressor.
- (B) Discharge tube / seals replacement.
- (C) Installation of a new particle separator or replacement of swirl tubes.

TM 55-1520-228-MTF

- (D) Replacement or repair of components in the combustion section to include liner and fuel nozzle.

NOTE

Prior to establishing new HIT baseline valves, clean compressor and check the accuracy of the following instrument systems: TOT, OAT, and N1.

2. Follow instructions found on OH-58A/C HIT TOT Worksheet. Refer to • TM 55-2840-231-23 or **A-720**
C TM 55-2840-241-23.

G. **CS** ATAS MISSILE SYSTEM CHECK.

1. ATAS MASTER switch - ARM. Verify the following are displayed on PDU:
 - a. ARM.
 - b. Missile status symbology.
 - c. Target acquisition reticle.
2. UNCAGE switch - AUTO.
3. Helicopter - Maneuver to position acquisition reticle on target.
4. MSL ACT switch - Press. Verify gyro spinup tone is received in headset and missile is selected.
5. TRIGGER UNCAGE/FIRE switch - Press to first detent and hold. Verify tracking reticle replaces acquisition reticle and gyro spinup tone changes to high pitch, steady tone indicating IR source lock-on. Verify super elevation lines appear.
6. Seeker - Verify tracking proper target.
7. TRIGGER UNCAGE/FIRE switch - Press to second detent. Verify firing of selected missile by missile symbol disappearing and momentary "X" in tracking reticle.
8. TRIGGER UNCAGE/FIRE switch - Release. Missile symbology should not reappear.

TM 55-1520-228-MTF

9. CFT RST switch - Press. Verify missile status is same as step 1.
10. ATAS MASTER switch - OFF.

SECTION V. CHARTS AND FORMS

General. This section contains the necessary charts and forms required to ascertain that the aircraft is performing to established standards and to record readings, pressures, RPM, etc., obtained during the maintenance test flight.

LIST OF CHARTS

Figure Number	Title	Page
5-1	Tail Rotor Balance Chart	5-2
5-2	Main Rotor Track and Balance Chart	5-4
5-3	In-Flight Main Rotor Tracking Chart	5-6
5-4	OH-58A Maximum Torque Available	5-8
5-5	OH-58A-720 & OH-58C Maximum Torque Available	5-9
5-6	Balance Weight Conversion	5-10
5-7	OH-58A Bleed Valve Closure Chart	5-11
5-8	OH-58A-720 & OH-58C Bleed Valve Closure Chart	5-12
5-9	Maintenance Test Flight Check Sheet	5-13
5-10	Alternate Ground Tracking Procedure	5-15
5-11	Alternate Lateral Smoothing Procedure	5-17
5-12	Alternate Vertical Smoothing Procedure	5-19

TM 55-1520-228-MTF

Balance Chart #3438

Date _____
Serial No. _____

		1st Run	2nd Run
A	Clock Angle		
	"IPS"		
C	MOVE		
	GRAMS (1)		
	DISC HOLE (2) (Clock Angles)		

1. Read around circular lines from plotted IPS and clock to GRAMS scale, and enter grams.
2. Enter clock angle from A.

NOTES - Run ship at 100%, flat pitch, on the ground.


1. Set Balancer to 2550 RPM. Direct Strobex at tail rotor hub and observe clock angle of target.
2. Then depress "Verify Tune" button and adjust "RPM Tune" dial to return target to clock angle observed before button was pushed. Release button, observe angle, press and adjust again until clock angle remains the same whether button is released or pushed. ADJUST ONLY WITH BUTTON PUSHED.
3. Read clock angle without button pushed, and "IPS" from Balancer meter - WITHOUT STROBEX FLASHING - and record in Section A of chart. Plot in B (label it point #1), and note indicated weight changes in C.
4. Make indicated changes, run ship to check result and repeat if required to reduce "IPS" to .2 or less.
5. Look along the "move" line on the chart (from reading #1 to #2, chart rotated to bring #1 nearest to eye). If it goes directly toward or through the center of the chart the weight was placed in the correct hole. If it misses to the left, move the weight to the next hole counter-clockwise from the one chosen. If it misses to the right, move weight to the next hole clockwise. If the error is about 1/2 hour (the angle formed between lines from points #1 and #2 and point #1 and center of chart = about 1/2 hour), divide the required weight between the hole chosen and the next hole as determined above.

If the move line is too short or too long, use more or less weight

6. It is normal that the "Clock Angle" display and "IPS" will "jitter" or become uncertain and erratic as good balance is approached. Judge a center value.

206900-498-1

Figure 5-1. Tail Rotor Balance Chart (Sheet 1 of 2)

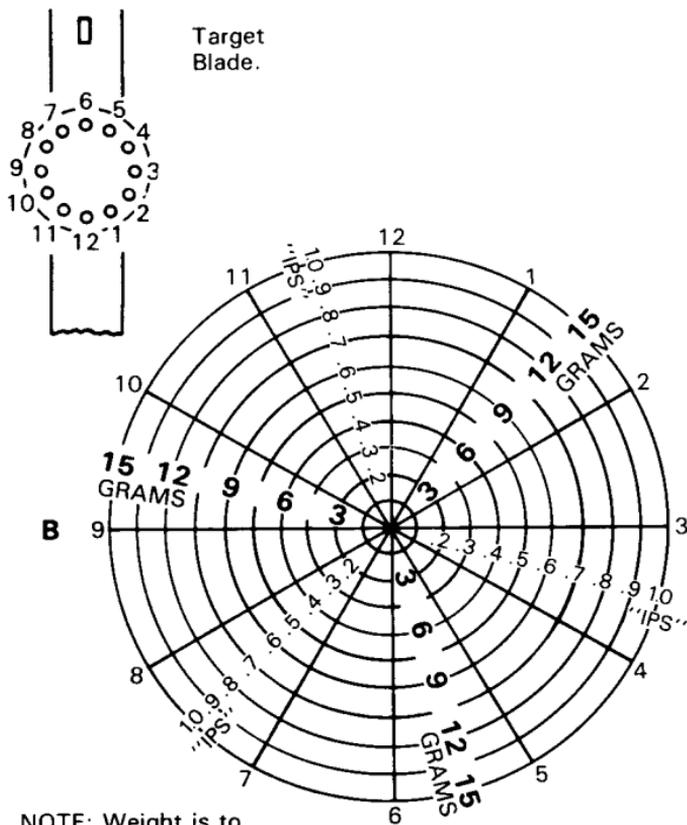

NOTE: Weight is to be placed in hole same as observed Clock Angle. Note that the hole numbers on the balance wheel are counter-clockwise.

206900-498-2

Figure 5-1. Tail Rotor Balance Chart (Sheet 2)

TM 55-1520-228-MTF

Balance Chart #3411

Date _____
Serial No. _____

		1st Run	2nd Run
A	Check TRACK after each move		
	Clock Angle READING		
	"IPS"		
C	MOVE		
	Grams in Target Blade Bolt		
	Grams in Blank Blade Bolt		
	Sweep Target Blade Aft		
	Sweep Blank Blade Aft		

NOTES - 1. Set tabs at trail. Adjust for good track at 100% flat pitch, on the ground, using pitch link only.

2. Set BALANCER to 354 RPM. Push "TEST" button and check that the 12:00 and 6:00 O'clock lights are lighted. Release button.

3. Observe Clock Angle of lighted light, the press "Verify Tune" button. Adjust "RPM Tune" dial WHILE BUTTON IS PUSHED to return light to angle observed BEFORE BUTTON WAS PUSHED. Release button, observe angle, press and adjust again to match new "unpushed" angle. Repeat until there is no change WHETHER BUTTON IS PUSHED OR RELEASED.

4. Record Clock Angle and "IPS" in section A of chart. Plot in B (label it #1). Note indicated changes in C.


5. Make changes indicated. Run ship to check result (label it point #2). Repeat as required to reduce "IPS" to .2 or less.

6. If Move Line (point #1 to #2) is not in the correct direction, use "Clock Angle corrector" #3597, and assign new numbers to clock. SEE MANUAL FOR DETAILS.

206900-499-1

**Figure 5-2. Main Rotor Track and Balance Chart
(Sheet 1 of 2)**

TAKE BALANCE READINGS ONLY WHEN SHIP IS IN TRACK.

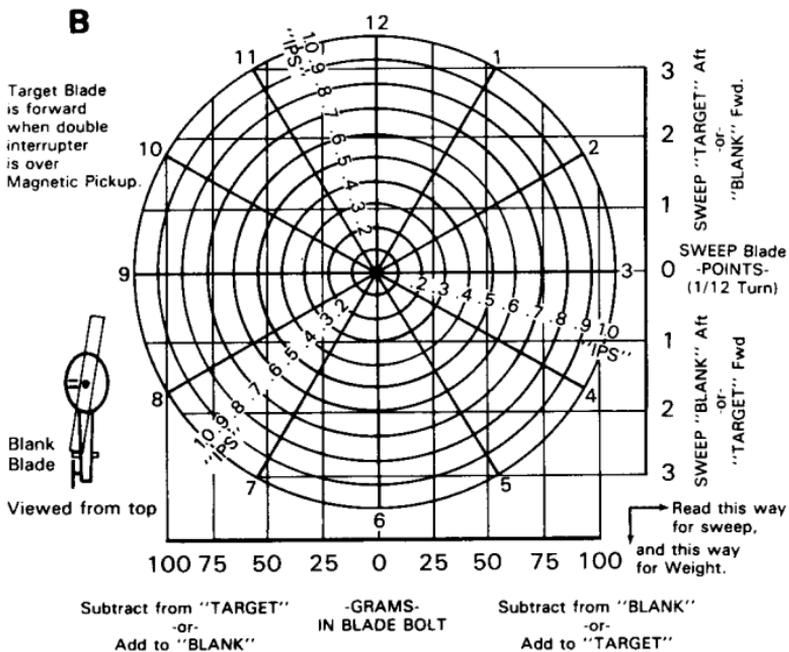

206900-499-2

Figure 5-2. Main Rotor Track and Balance Chart (Sheet 2)

In-Flight
Tracking Chart #3875
Main Rotor

Date _____
Serial No. _____

		80 1st Run 120	80 2nd Run 120
	TRACK		
A	Clock Angle		
	READINGS "IPS"		
C	MOVE	NOTE CHANGE TO TAB OR PITCH-LINK. IDENTIFY BLADE.	

NOTES: — 1. Ship must be in good ground track, as from balancing operation (Figure 5-2)

2. Fly ship at 80 MPH. Sketch observed track. Set Balancer to 354 RPM. Place "Function" switch to channel "B". Press "Test" button and check that the 12:00 and 6:00 o'clock lights are lighted. Release button.

3. Observe "Clock Angle" of lighted light, then press "Verify Tune" button. Adjust "RPM Tune" dial WHILE BUTTON IS PUSHED to return light to angle observed BEFORE BUTTON WAS PUSHED. Release button, observe angle, press and adjust again to match new UN PUSHED angle. Repeat until there is NO CHANGE WHETHER BUTTON IS PUSHED OR RELEASED.

4. Record "Clock Angle" and "IPS" in section A of chart.

5. Increase speed to 120 MPH (or high speed) and repeat "Track" and Channel "B" readings as above. Plot 120 MPH readings in section B of chart.

6. Make indicated changes. Run ship to check result, (label it point #2). Repeat as required to reduce "IPS" to .2 or less.

206900-500-1

Figure 5-3. In-Flight Main Rotor Tracking Chart
(Sheet 1 of 2)


TM 55-1520-228-MTF

Accelerometer connector
MUST point DOWN. Refer to
TM-55-1520-228-23
for detailed installation
instructions.

B

Target Blade
is forward
when double
interrupter
is over
Magnetic Pickup.

Read vertical one-per-rev
vibration ("IPS" and "Clock
Angle") and observe track
at 80 and 120 MPH. Plot
Channel "B" vertical read-
ings at 120 MPH or fastest
airspeed attained.

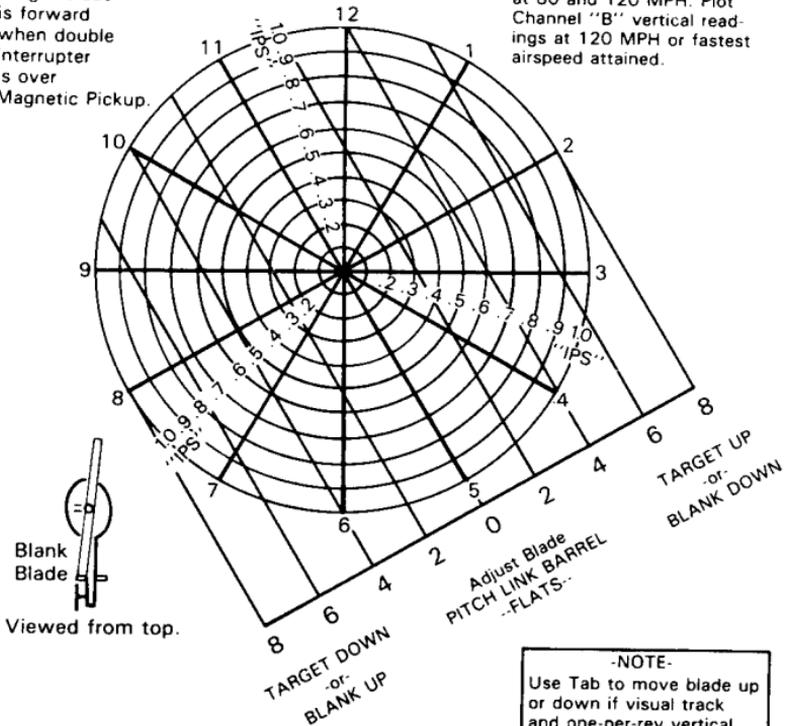


206900-500-2

Figure 5-3. In-Flight Main Rotor Tracking Chart
(Sheet 2)

TM 55-1520-228-MTF


MAXIMUM TORQUE AVAILABLE (30 minute operation)
ENGINE DEICE AND HEATER OFF 103% RPM

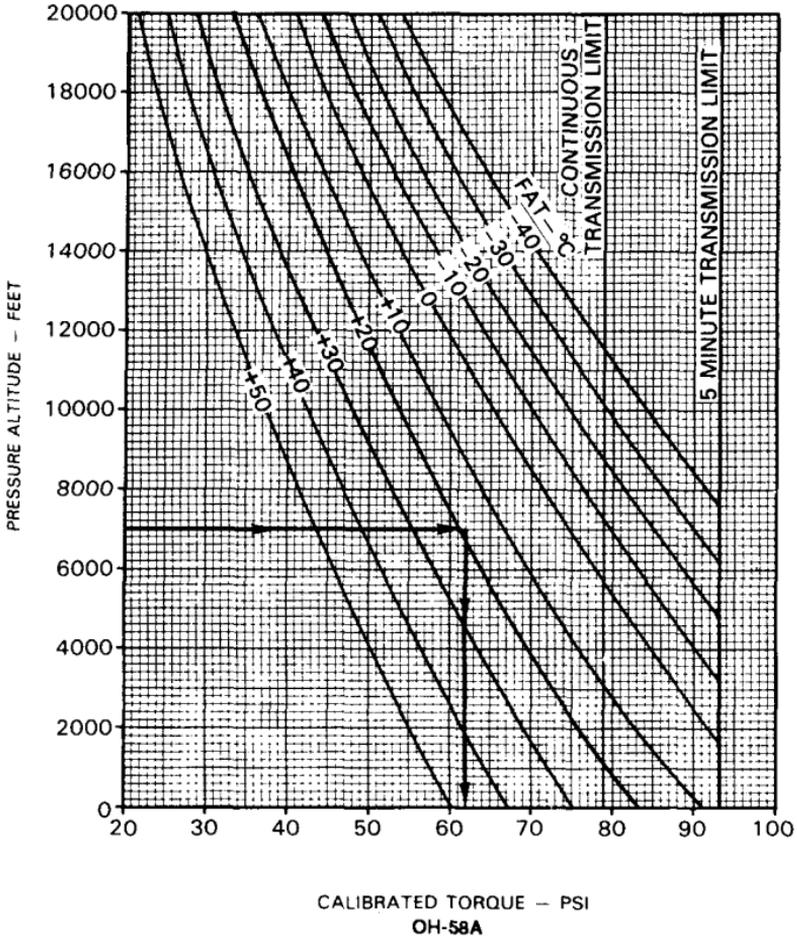

206900-501

Figure 5-4. OH-58A (A-700) Maximum Torque Available

TM 55-1520-228-MTF

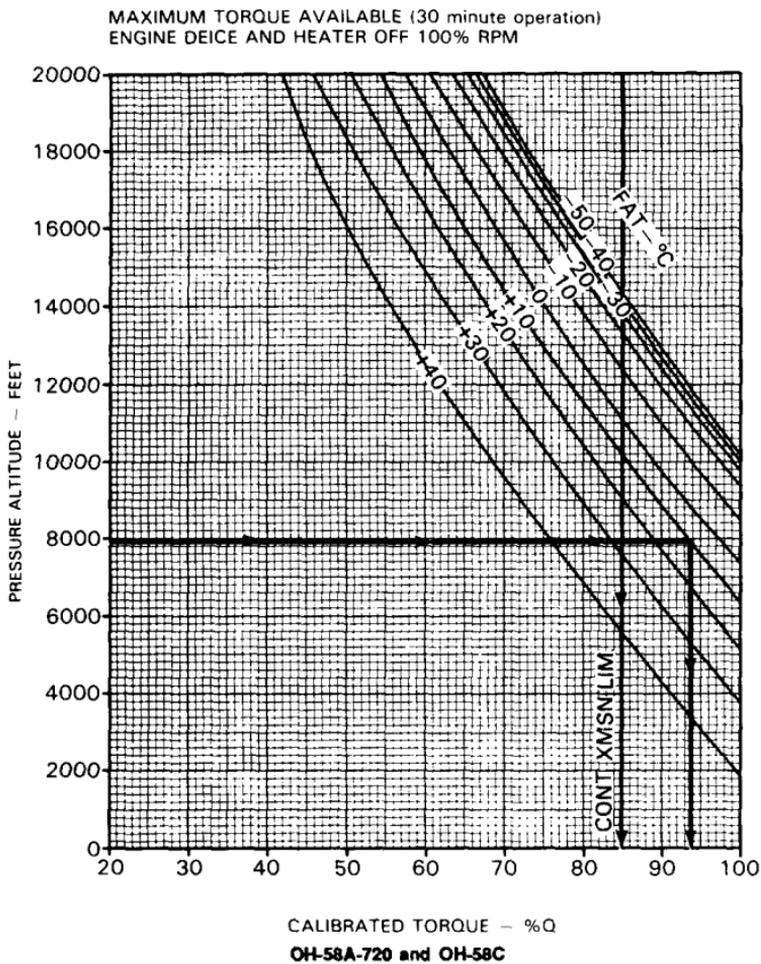

206900-502


Figure 5-8. OH-58A-720 & OH-58C
Maximum Torque Available

TM 55-1520-228-MTF

ITEM NO.	NOMENCLATURE	NSN	WEIGHT
1.	AN3-3A BOLT	5306-00-150-9221	2.96 GRAMS
2.	AN3-4A BOLT	5306-00-722-0393	3.41 GRAMS
3.	AN3-5A BOLT	5306-00-274-2119	3.86 GRAMS
4.	NAS679A3 NUT	5310-00-807-1474	1.27 GRAMS
5.	AN960-10 WASHER	5310-00-167-0818	0.90 GRAMS
6.	AN970-3 WASHER	5310-00-167-0765	5.00 GRAMS
			206900-503

Figure 5-6. Balance Weight Conversion


TM 55-1520-228-MTF

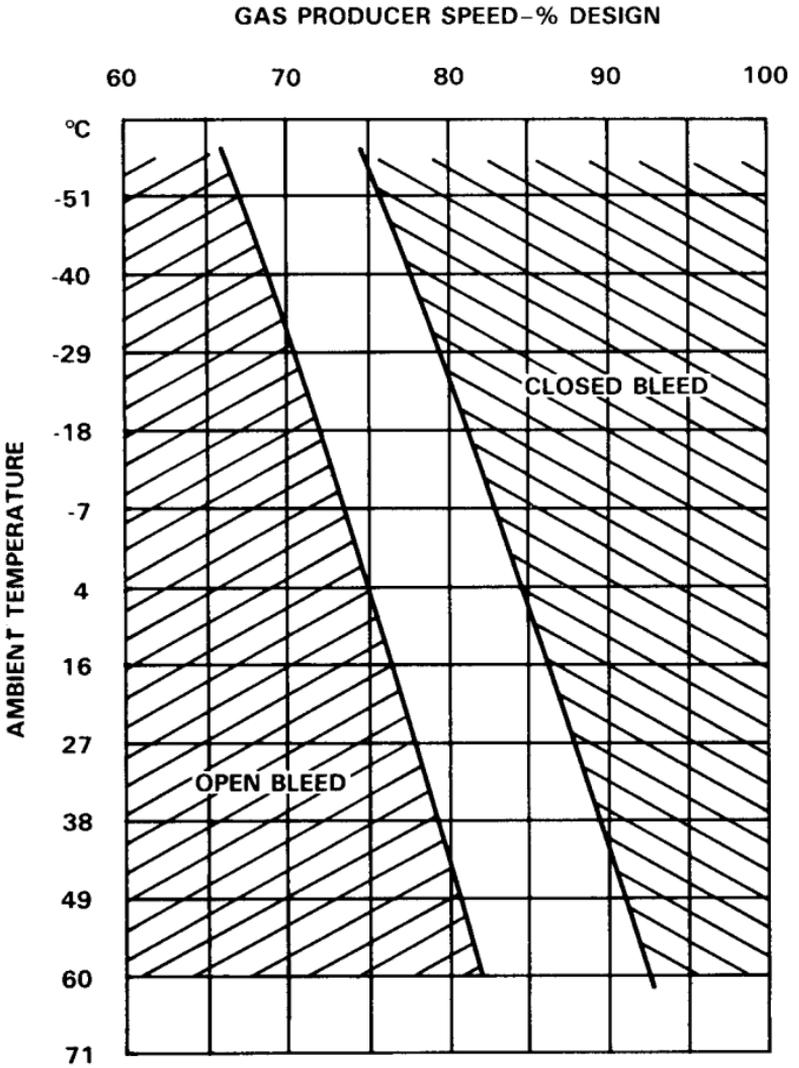

206900-504

Figure 5-7. OH-58A Bleed Valve Closure Chart

TM 55-1520-228-MTF

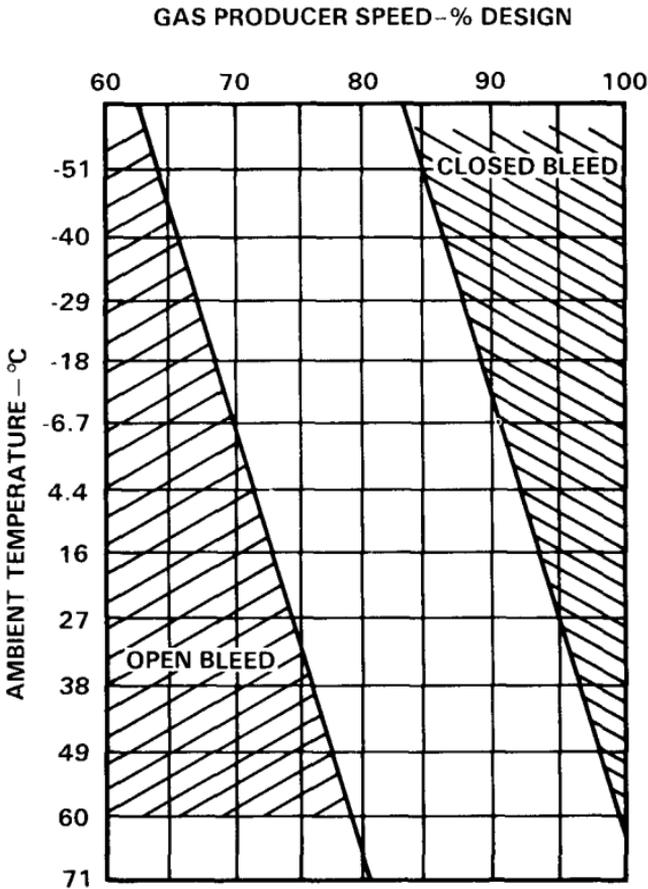

206900-505

☆ U.S. GOVERNMENT PRINTING OFFICE: 1991 554-122/21199

Figure 5-8. OH-58A-720 & OH-58C
Maximum Torque Available

TM 56-1520-228-MTF

PURPOSE OF TEST FLIGHT:	
ACFT S/N:	DATE:
PILOT:	UNIT:
SYMBOLS: √ = SATISFACTORY X = DEFICIENCY	
PRIOR TO MAINTENANCE TEST	6. ENGINE RESPONSE
FLIGHT	INFLIGHT CHECKS
1. FORMS AND RECORDS	1. CONTROL RIGGING
2. FLIGHT READINESS INSP	2. AUTOROTATION
BEFORE STARTING ENGINE	ROTOR _____ RPM
CHECKS	3. ENGINE PERFORMANCE
1. FAT	CHECK _____
2. ALTIMETER	PA _____ FAT _____
3. WARNING LIGHTS	TORQUE _____ N1 _____
4. CAUTION PANEL	TOT _____
STARTING ENGINE AND RUNUP	4. HYDRAULIC OFF
CHECKS	UP _____ PSI
1. START	DOWN _____ PSI
PEAK TOT _____ °C	5. VIBRATION ANALYSIS
START TIME _____	6. FLIGHT INSTRUMENTS
2. CYCLIC	AIR SPEED _____ MAG COMP _____
3. COLLECTIVE	IVSI _____ RBI _____
4. HYDRAULIC SYSTEM	ATT IND _____ CLOCK _____
5. GOV RPM SWITCH	TURN SLIP _____
6. COMPRESSOR BLEED VALVE	7. AVIONICS
START TO CLOSE _____ % N1	XPDR _____ VHF _____
FULL CLOSE _____ % N1	ADF _____ UHF _____
7. TORSIONAL OSCILLATION	FM#1 _____ KY-58 _____
8. FUEL PUMP	FM#2 _____ T-SEC 1/A _____
9. ENGINE IDLE SPEED CHECK	8. MISSION EQUIPMENT
10. ENGINE DEICE	ENGINE SHUTDOWN CHECKS
11. INSTRUMENTS	1. BATTERY
N1 _____ %	2. INSTRUMENTS
TOT _____ °C	N1 _____ %
TORQUE _____ PSI	TOT _____ °C
ENG OIL TEMP _____ °C	TORQUE _____ PSI
ENG OIL PRESS _____ PSI	ENG OIL TEMP _____ °C
12. HIT	ENG OIL PRESS _____ PSI
AIRCRAFT HOVER CHECKS	3. ROTOR RPM LIGHT/AUDIO
1. HOVER POWER	4. POST FLIGHT INSP
TORQUE _____ PSI	5. COMPLETE UPDATE FORMS
TOT _____ °C	AND RECORDS
N1 _____ %	6. SPECIAL EQUIPMENT LIST
2. FLIGHT CONTROLS	1.
3. (C) PRIMARY DIR. CONTROL	2.
4. PYLON ISOLATION MOUNT	3.
5. POWER CYLINDER	4.

206900-506-1A

**Figure 5-9. Maintenance Test Flight Check Sheet
(Sheet 1 of 2)**

TM 55-1520-228-MTF

ROTOR SMOOTHING RECORD

RED BLADE					WHITE BLADE				
ADJUSTMENT NUMBER	SERIAL NUMBER				ADJUSTMENT NUMBER	SERIAL NUMBER			
	TAB	ROLL	BALANCE	EFFECT		TAB	ROLL	BALANCE	EFFECT
1					1				
2					2				
3					3				
4					4				
5					5				
REMARKS									
PILOT'S SIGNATURE									

208900-506-2

**Figure 5-9. Maintenance Test Flight Check Sheet
(Sheet 2)**

By Order of the Secretary of the Army:

CARL E. VUONO
General, United States Army
Chief of Staff

Official:

WILLIAM J. MEEHAN II
Brigadier General, United States Army
The Adjutant General

DISTRIBUTION :

To be distributed in accordance with DA
Form 12-31, MTF Maintenance requirements
in OH-58A & C Helicopter, Observation.

CAUTION

If a problem is encountered during any phase of vibration check, do not continue. Shut down helicopter and correct problem. Repeat each step until no malfunction is detected that cannot be corrected by the next check or adjustment.

NOTE

Refer to TM 55-1520-228-23 for proper dimensions and maintenance procedures.

NOTE

The ground track is a reference only and does not mean that the rotor is in the best flight configuration

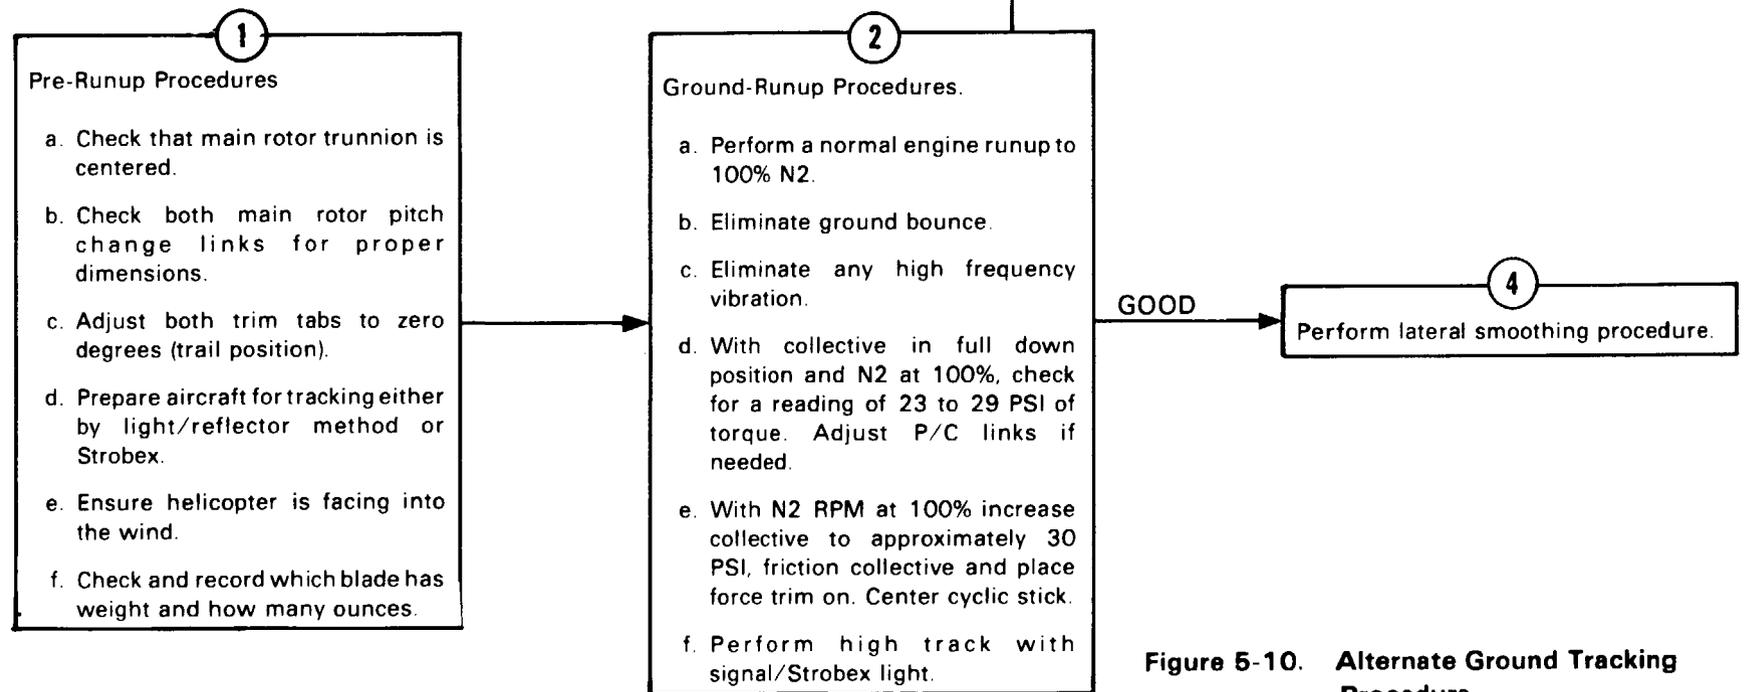


Figure 5-10. Alternate Ground Tracking Procedure

NOTE

All lateral vibrations must be eliminated before a vertical vibration can be eliminated. A lateral vibration will manifest itself as a vertical vibration in forward flight.

NOTE

The following procedures are to be used only if the vibrex balancing kit is not available. The vibrex is the recommended method and it should be utilized.

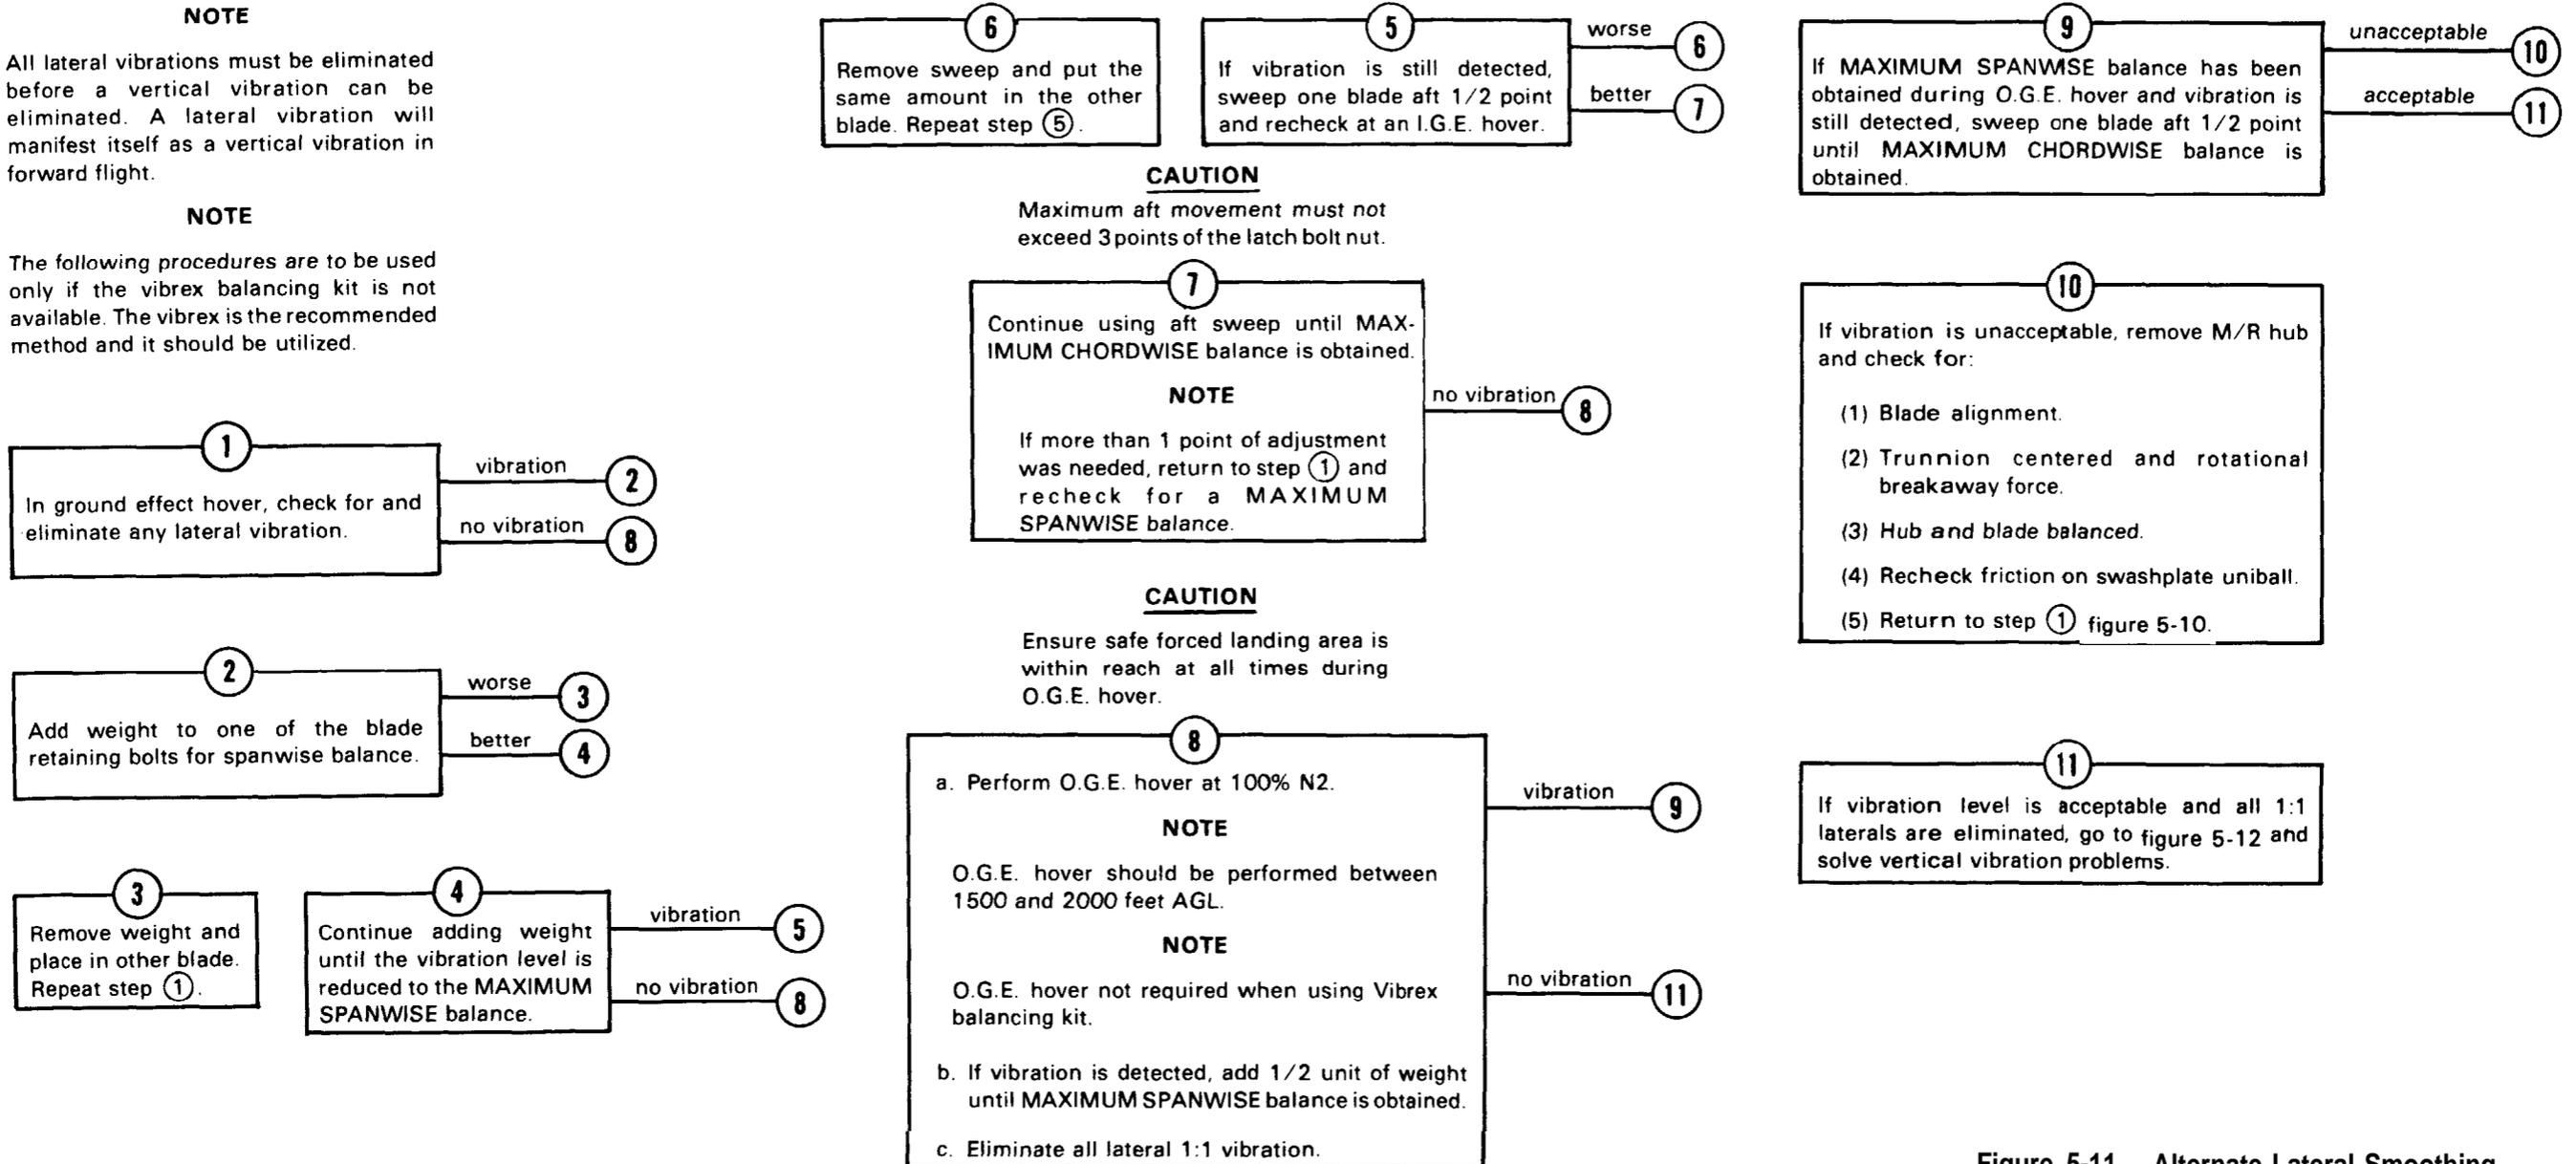


Figure 5-11. Alternate Lateral Smoothing Procedures

5-17/(5-18 blank)

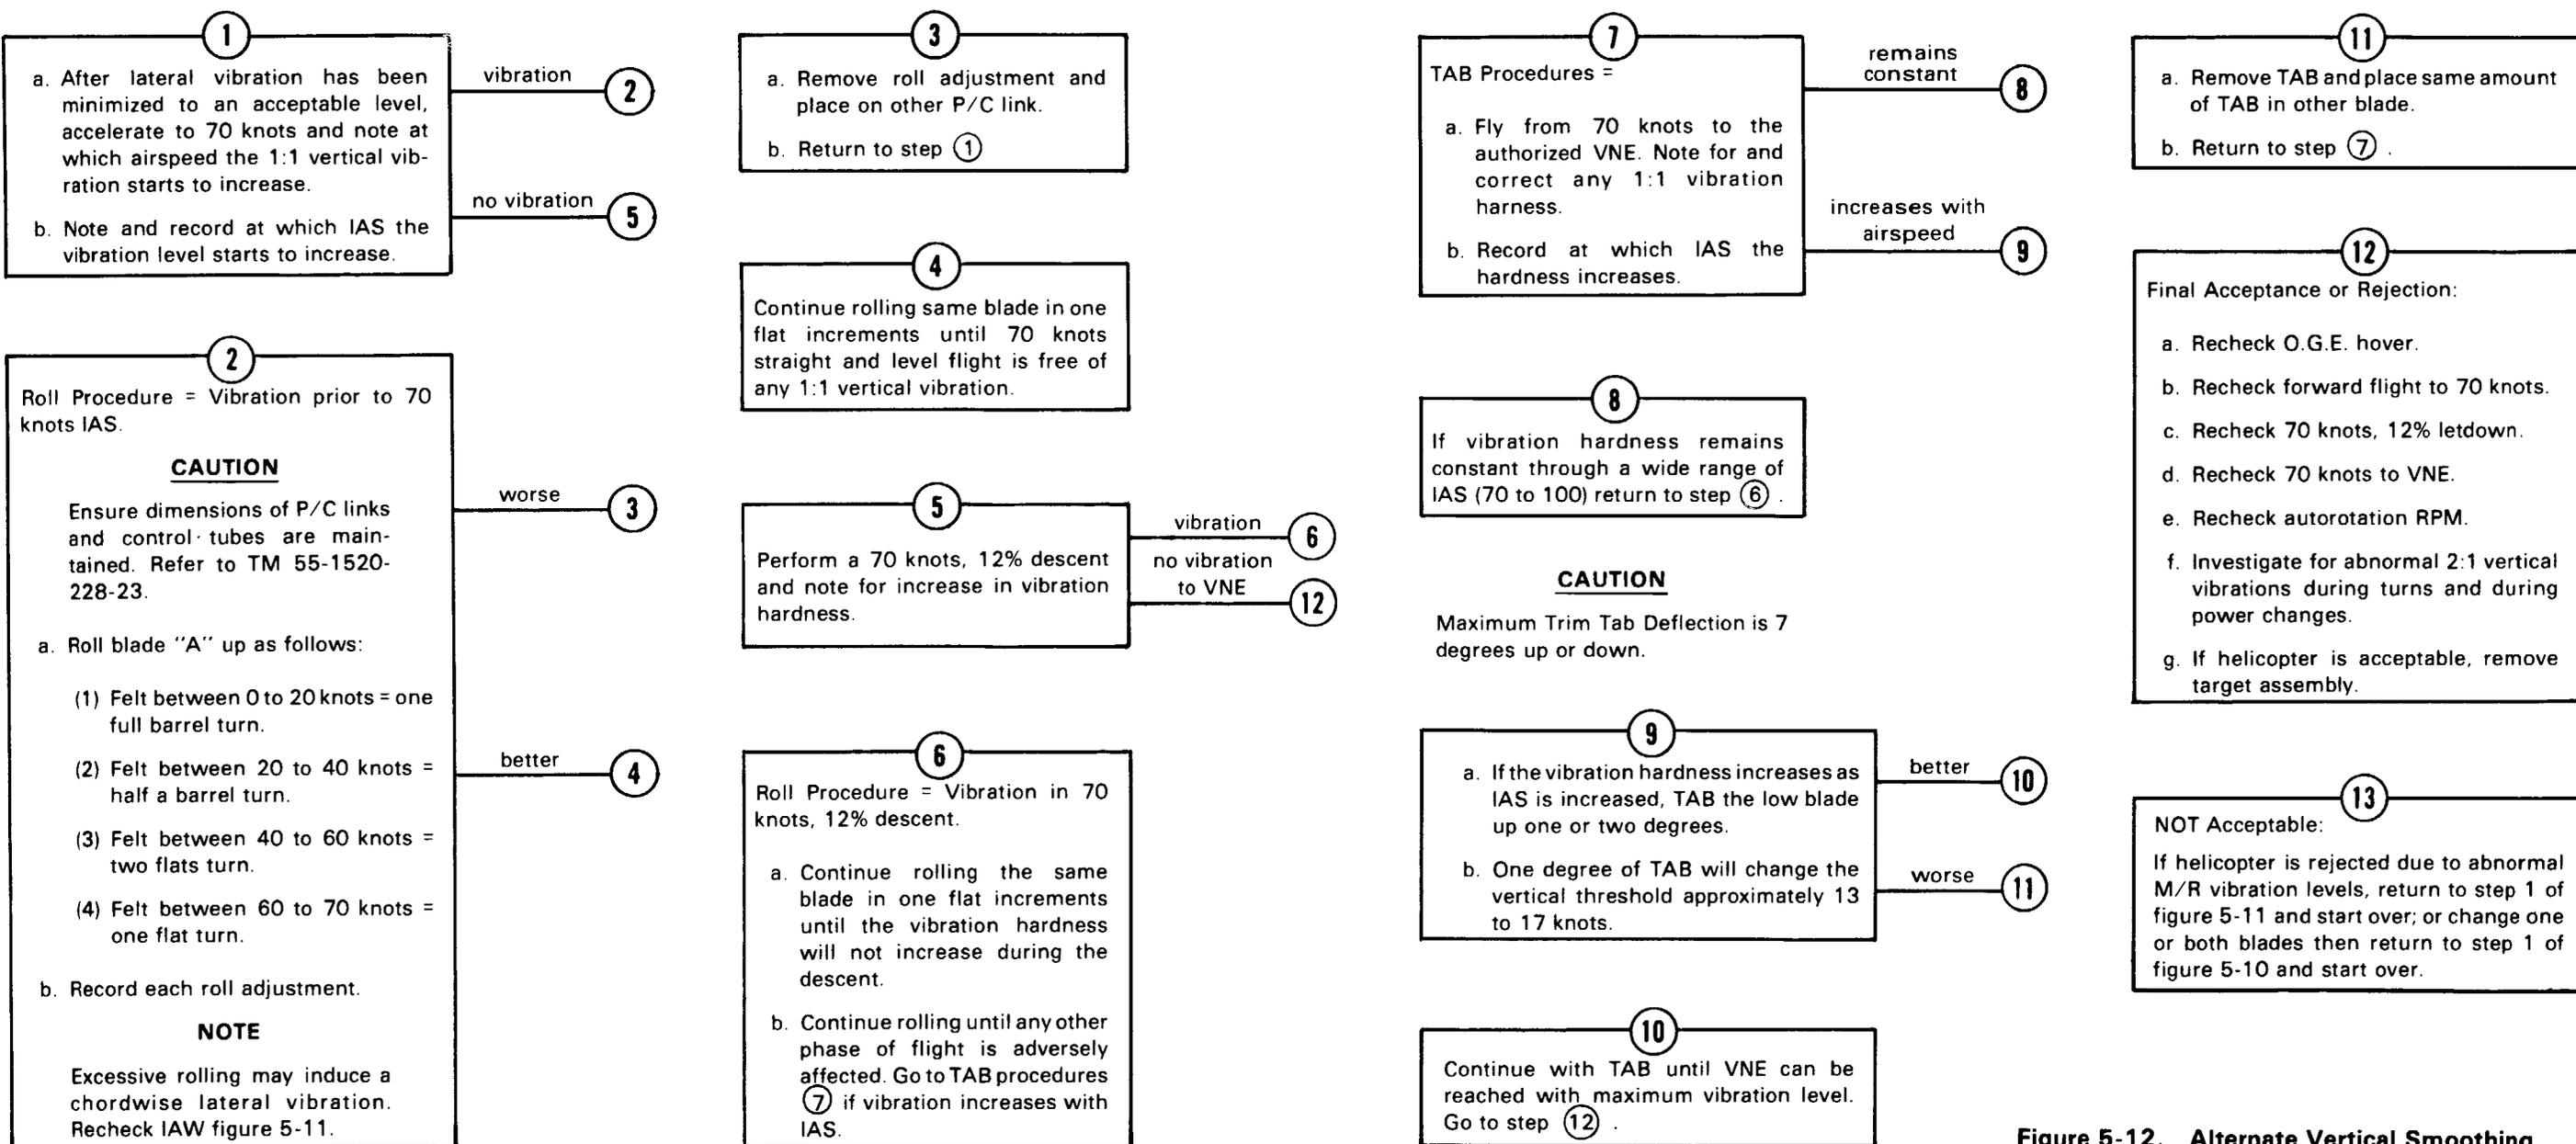


Figure 5-12. Alternate Vertical Smoothing Procedures

