

ADDENDEM TO H-58-09-AMAM-08 CO-PILOT CTYCLIC CONTROL STICK

NOTE

Figures 1 and 2 shall be performed with Co-Pilot Cyclic controls engaged.

1. Center Pilot Cyclic Stick and install Cyclic Rigging Pin (Bolt, NSN 5306-01-014-2213).
2. Measure as shown. Length should be approximately 20 inches.

1. Measure Co-pilots Cyclic Control Stick from lower tube fitting line to grip parting line as shown. Length should be approximately 11 inches when measured.

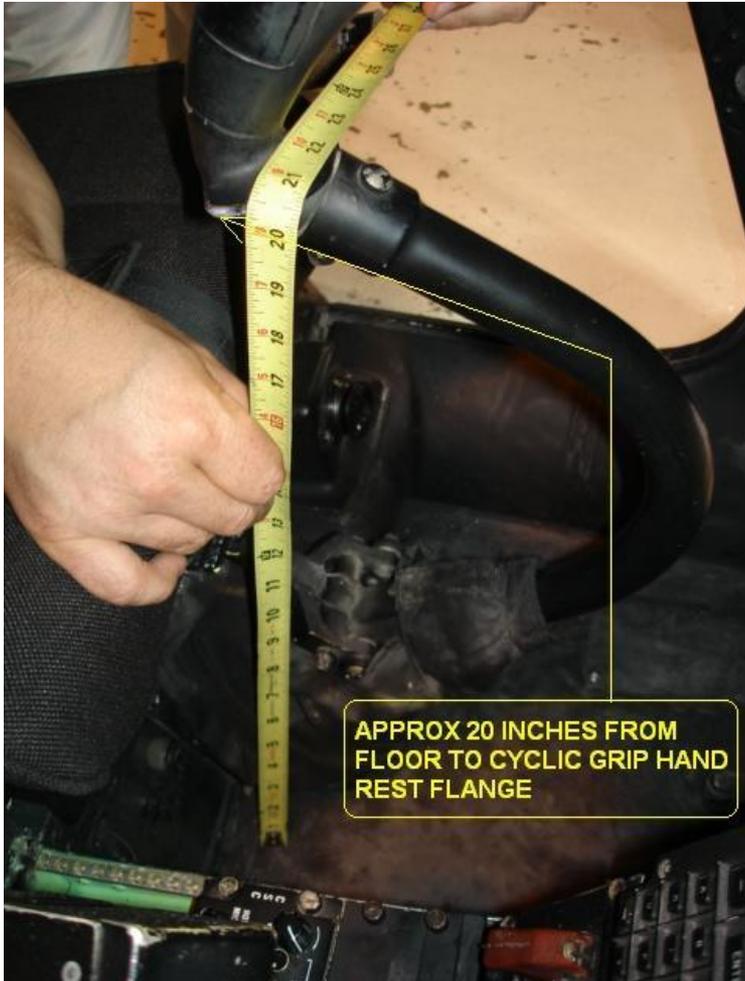


Figure 1



Figure 2

ADDENDEM TO H-58-09-AMAM-08 CO-PILOT CYCLIC CONTROL STICK

FOR UNINSTALLED CO-PILOT CYCLIC CONTROL STICKS ONLY,
Measure **uninstalled** Co-Pilots Cyclic Stick as shown. If measurement
exceeds 18 inches, tube may have been incorrectly assembled.



Figure 3

The photo below is an example of a non-conforming Co-pilot Cyclic Control Tube: Note length as measured.



Figure 4